 
 
 


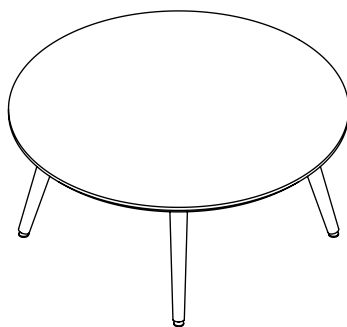


Possible legs

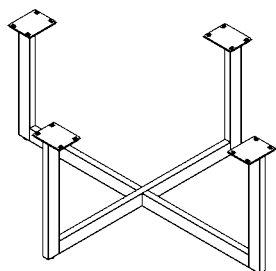

BST_79L/79L2

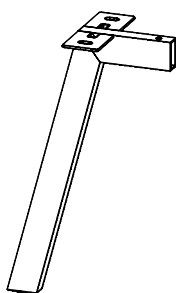

 BST_77S/L



BST_70S/L


Package

Set for legs BST_79L/L2

BST_79

05-002007

 05-001808

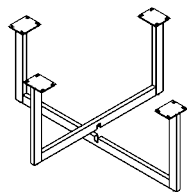

1X



16X



16X


Set for legs BST_77S/L

BST_77


05-000884

05-002007

 05-001808

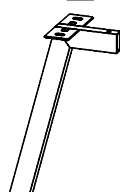

4X

 

4X



8X



8X

Set for legs BST_70S/L


BST_70

03-001348


05-001042



 4X

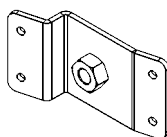


4X

 

16X




Example of installing legs BST79L/L2

 Step 1

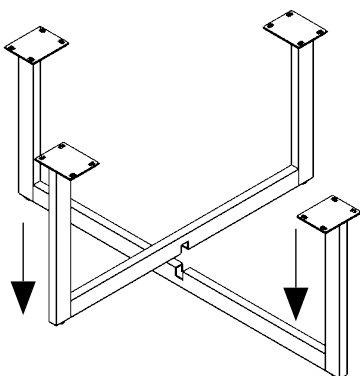


Step 2

   Install the legs according to the specially marked holes

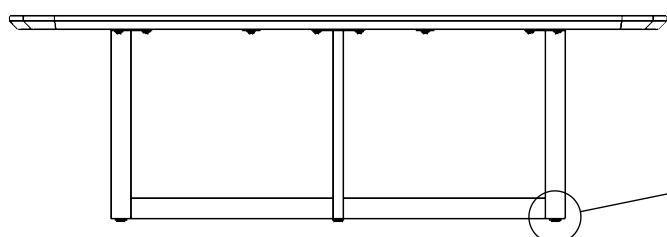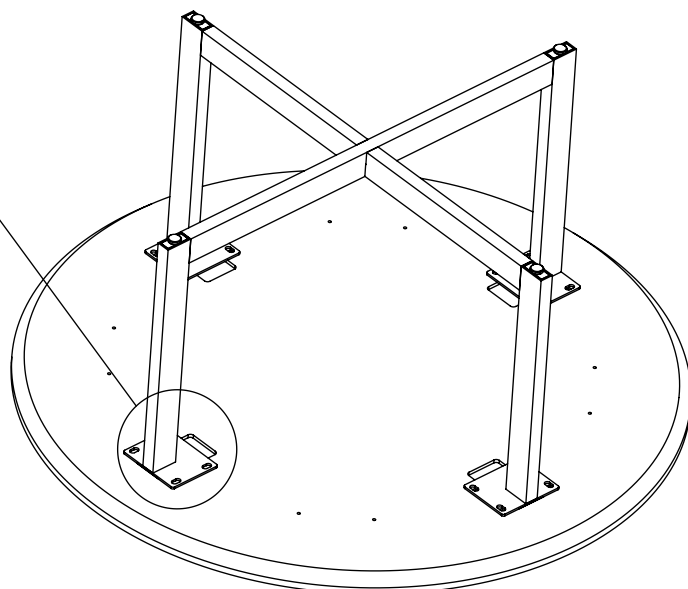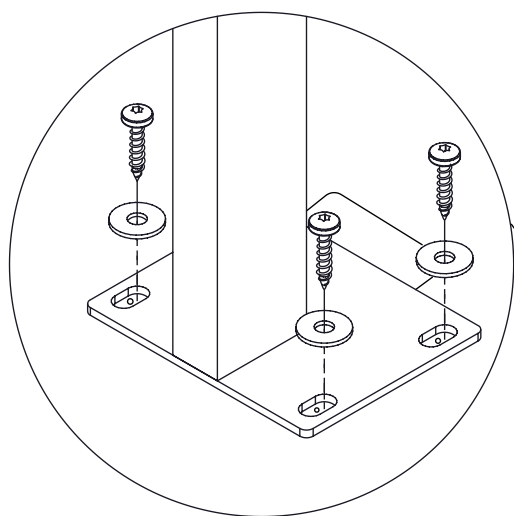

Step 3

 
After assembly, adjust the leg

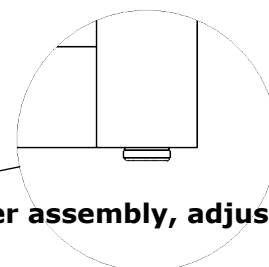


Example of installing legs BST77

Step 1

 Install the legs according to the specially marked holes

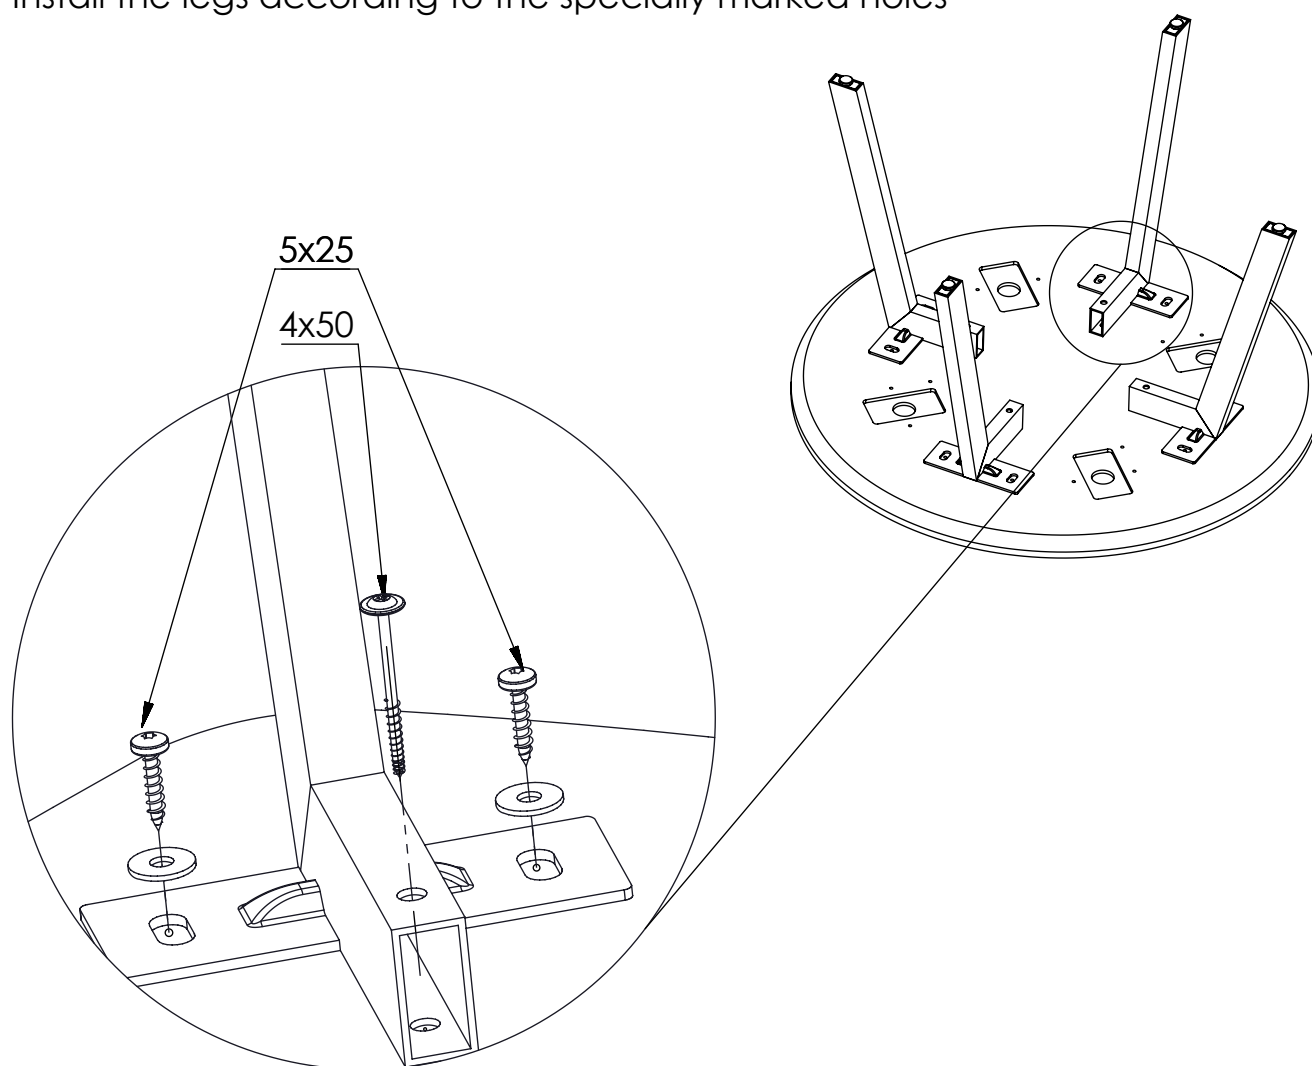


 
Step 2

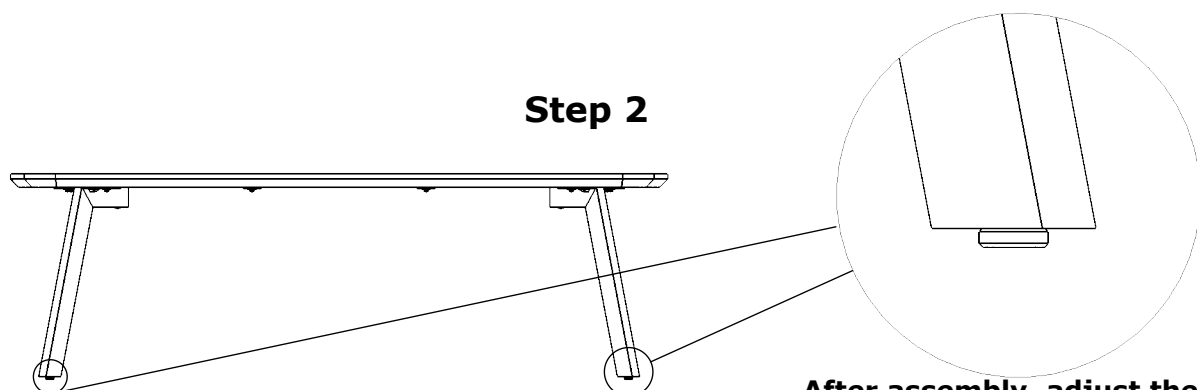



After assembly, adjust the leg

Example of installing legs BST70

 
 
Step 1

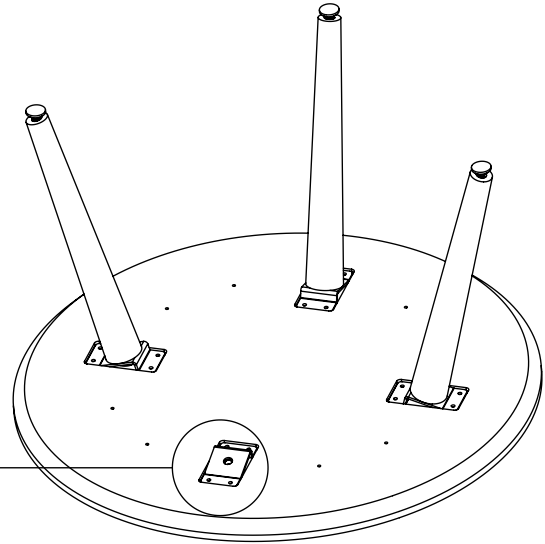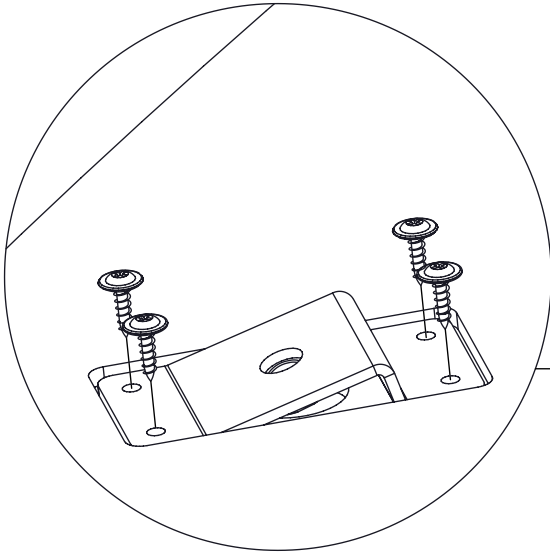

  Step 2

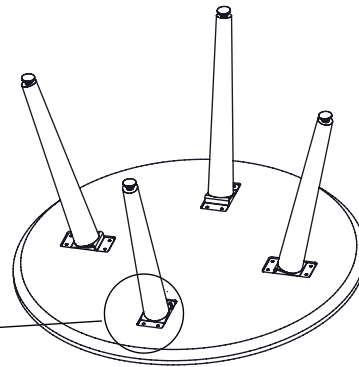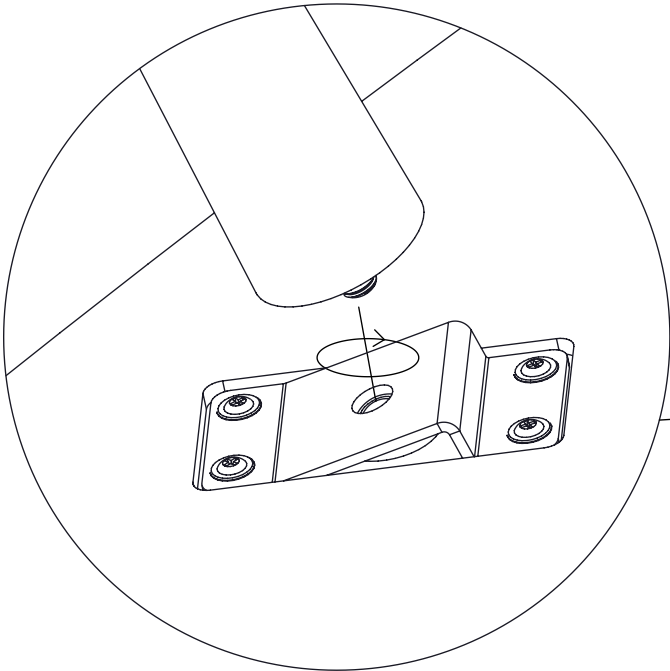

  Step 3

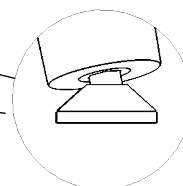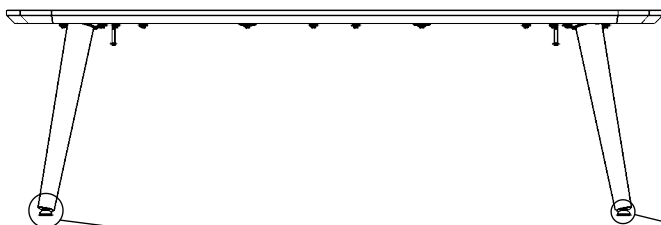

After assembly, adjust the leg