 
 
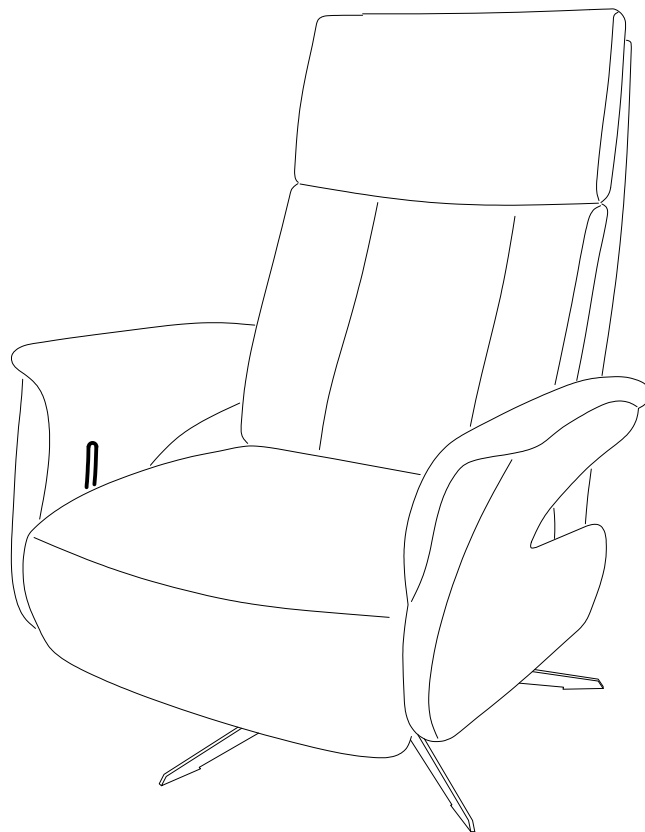 


Assembly instruction

300 with gas lift

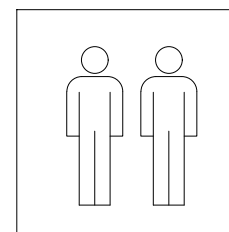

 
 
 
 
 
- The chair can only be used by children at least 8 years of age. People with reduced physical and intellectual abilities as well as people who don't have the knowledge nor experience of how to operate the chair can only use it under supervision or after being instructed how to use the chair in a safe way, so that all of the dangers are understandable for them.
- Children are not allowed to play with the chair.
- Children are not allowed to carry out the cleaning nor maintenance of the chair.
- The chair may only be used with the supplied power adapter
- The chair may only be powered from a network 220-230 VAC 50 Hz UE; 110-120 VAC 60 Hz USA.




two people

Components of the chair:

1. Headrest
2. Backrest
3. Left armrest
4. Right armrest
5. Lever for launching the function
6. Seat
7. Lever for changing the height
8. Central part
9. Base

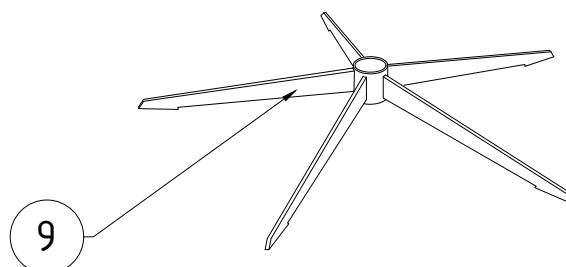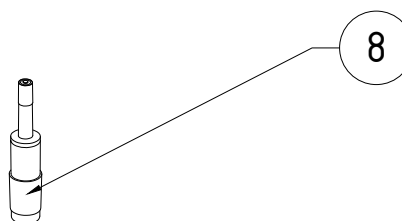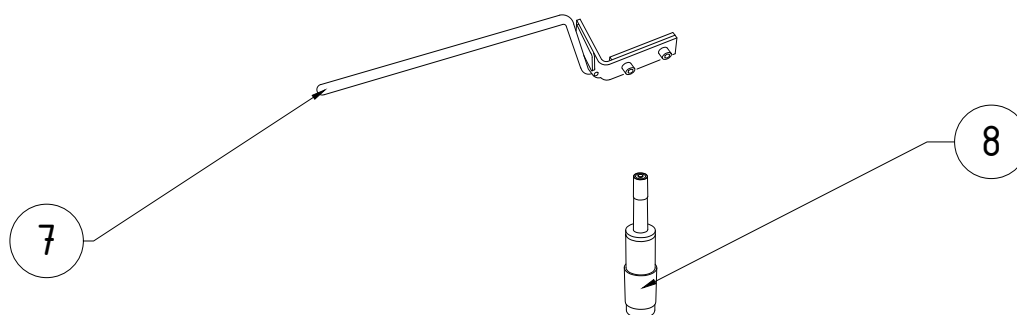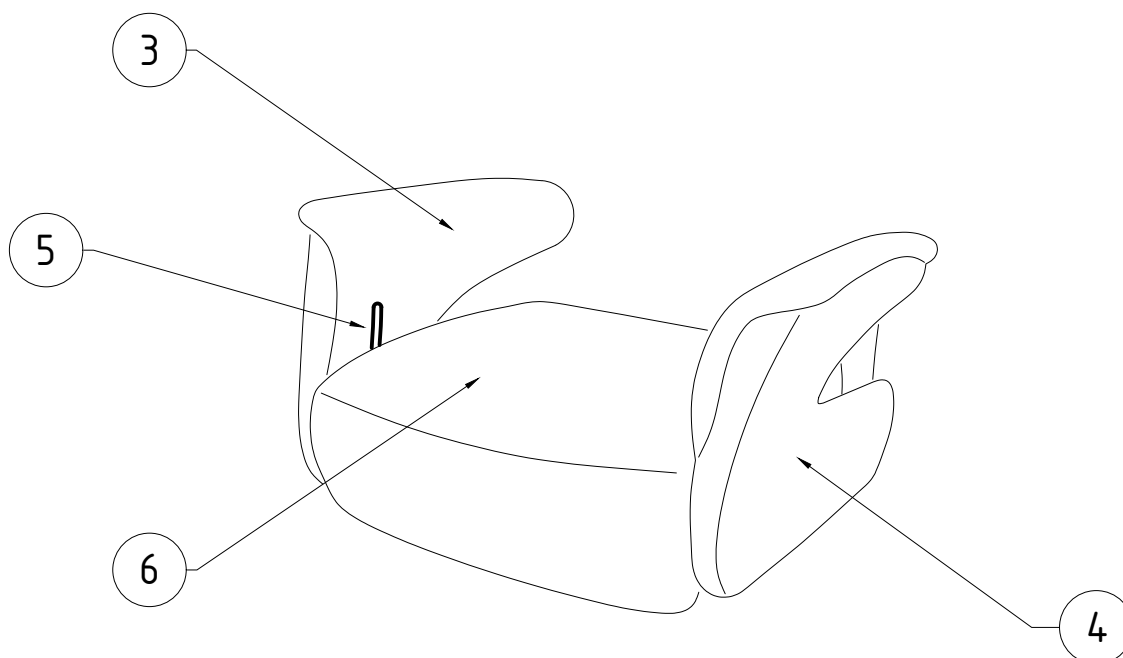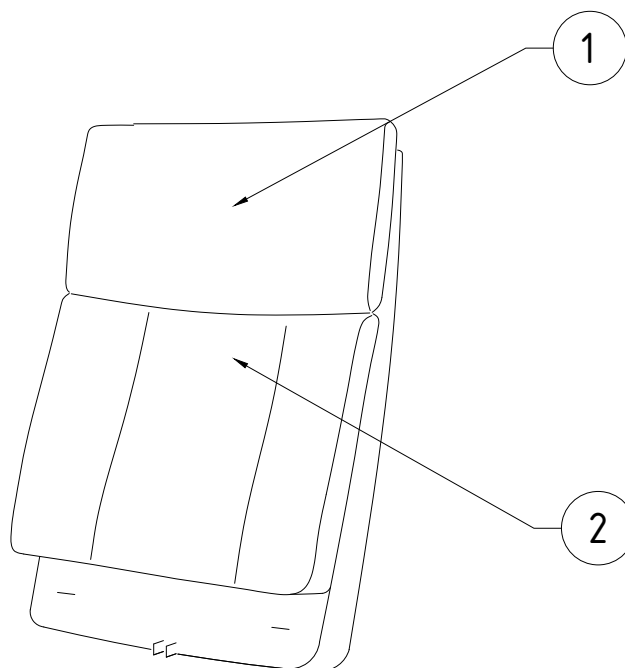


 1.1

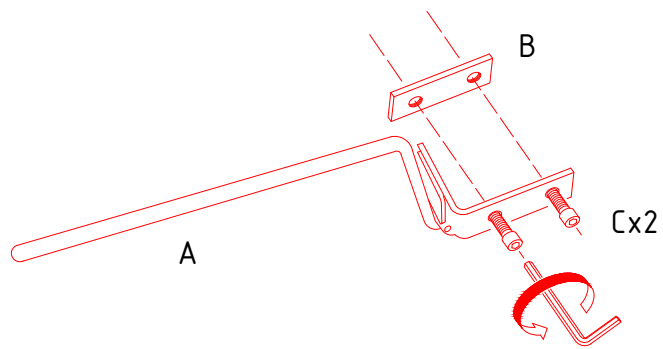


1.2

 
remove the transport protection

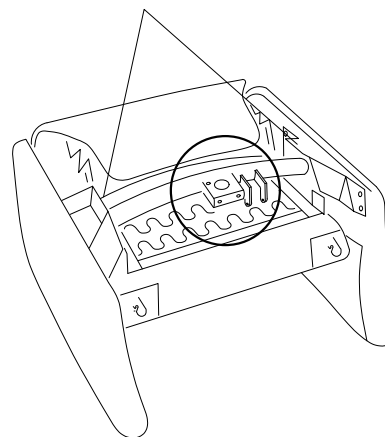

 
1.3

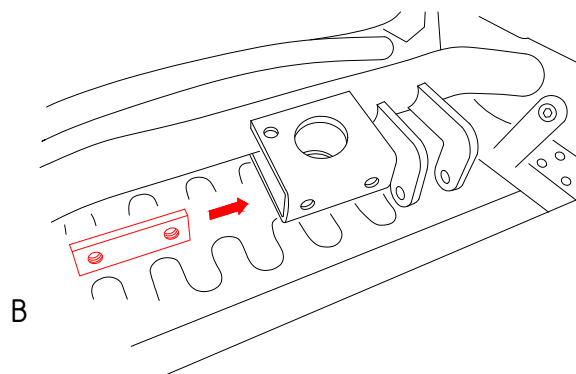

 
1.4

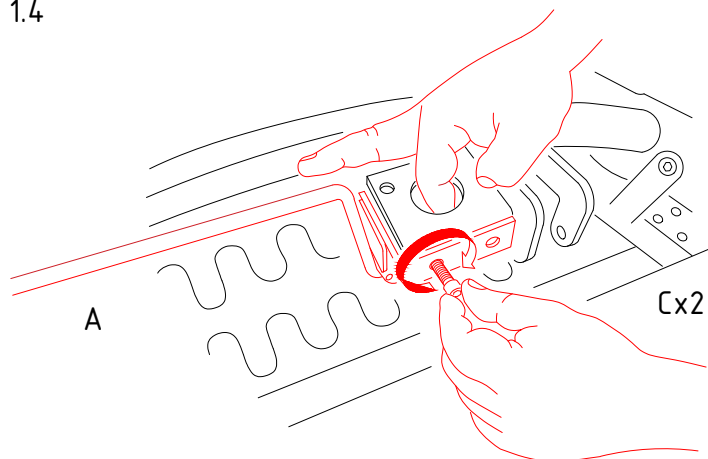

 1.5

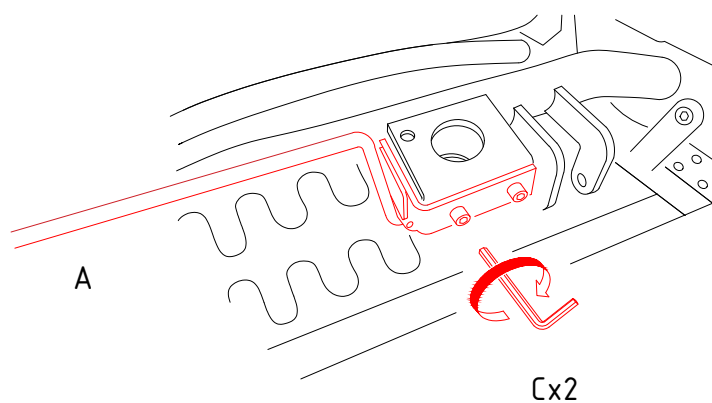

 
2.1




2.2



 
2.3

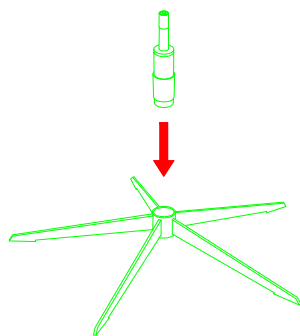

 
2.4

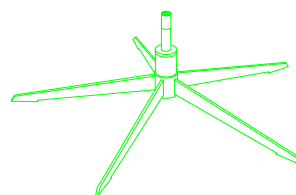


 
3.1

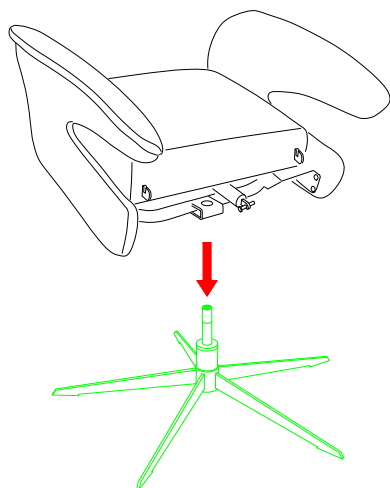

 
3.2

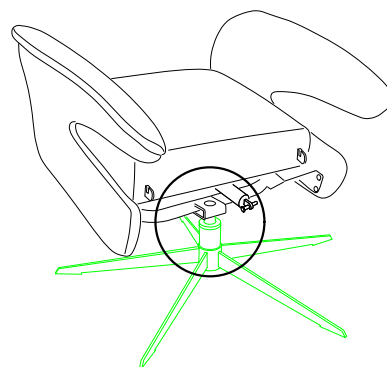

  
3.3

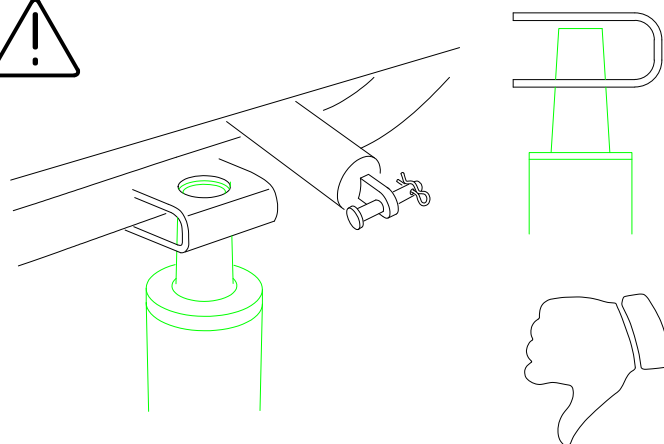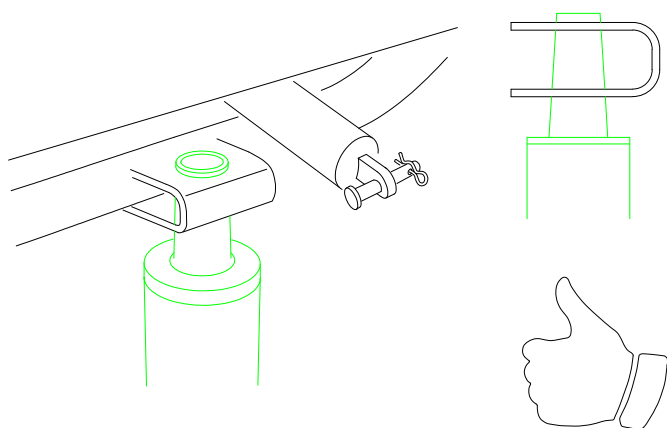

 
4.1

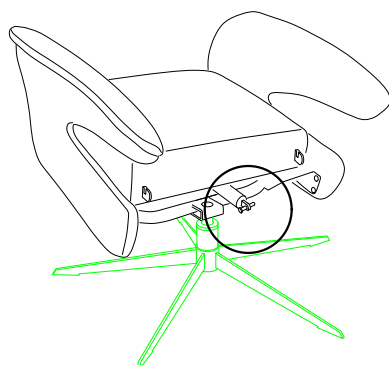

 
4.2

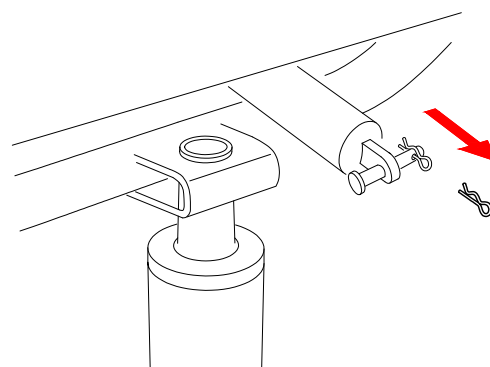

 
4.3

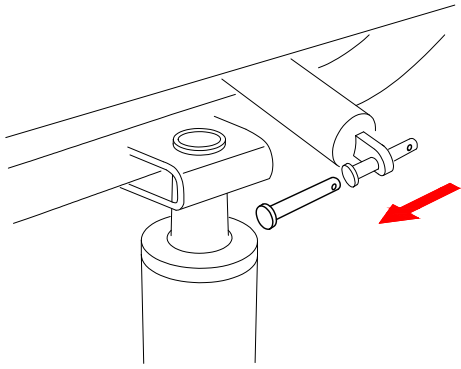

 
4.4

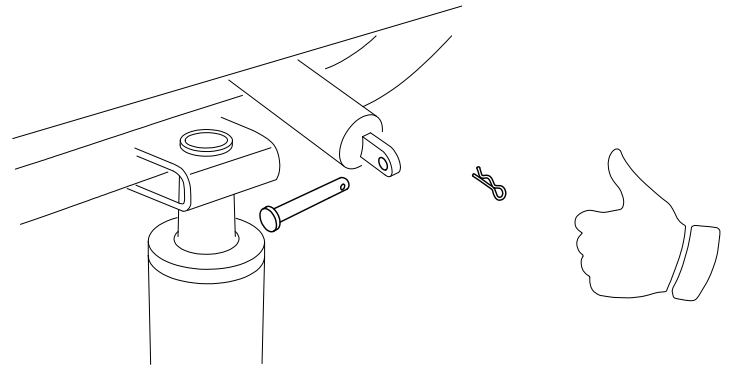

 
5.1

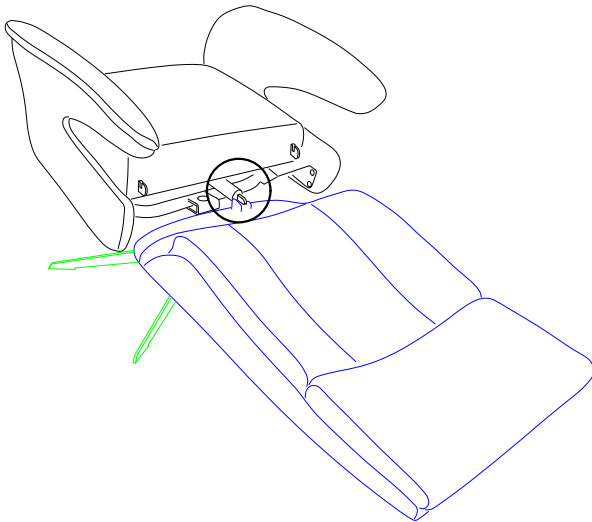

 
5.2

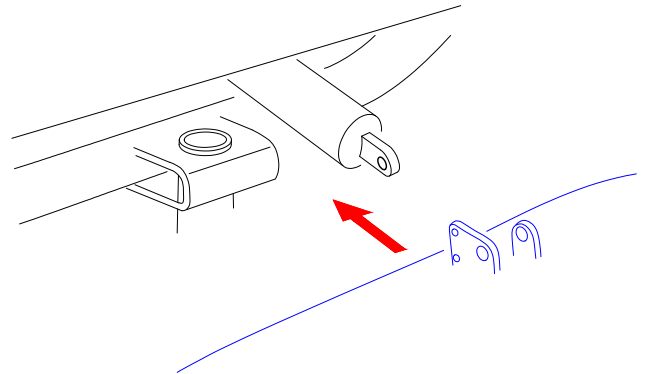

 
5.3

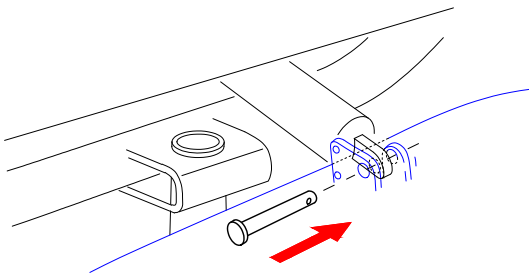

 5.4

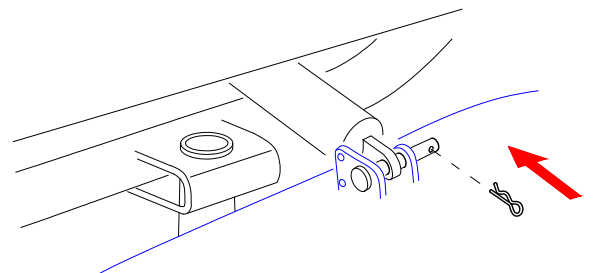


 5.5

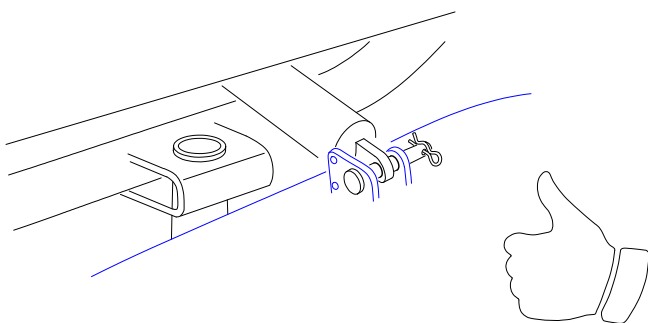


5.6

 
6.1

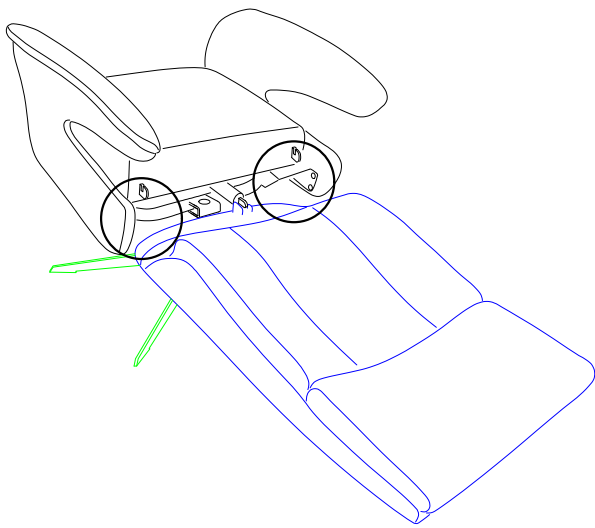

 
6.2

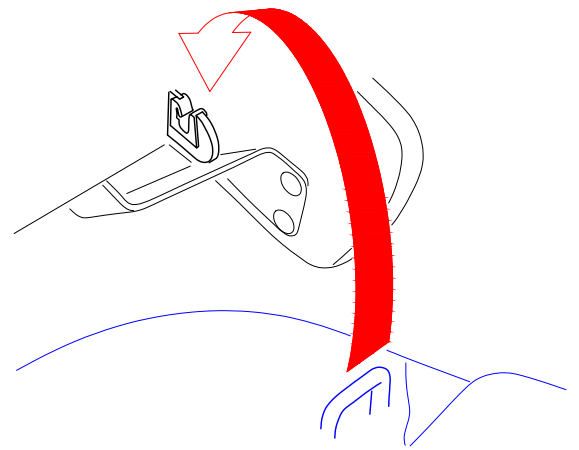

 6.3


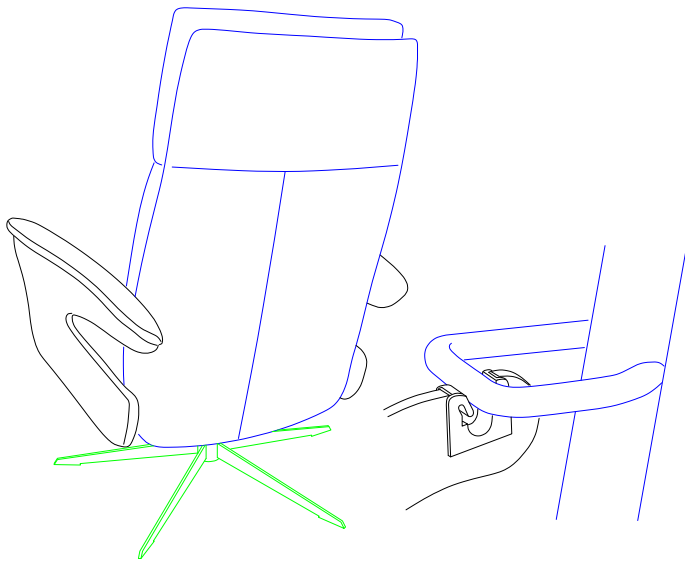




 
6.4

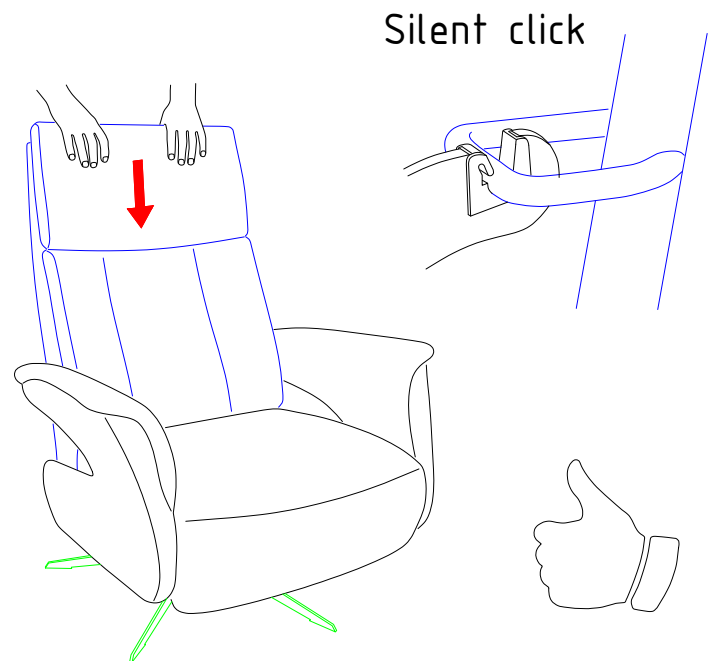


6.5

      
check back is fixed

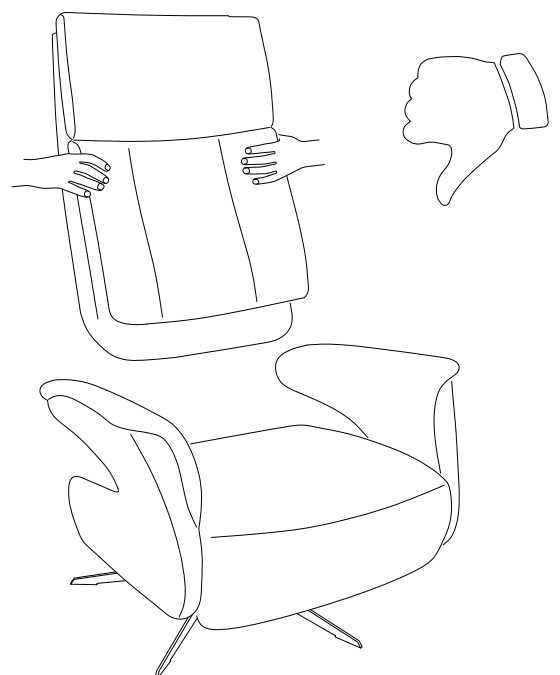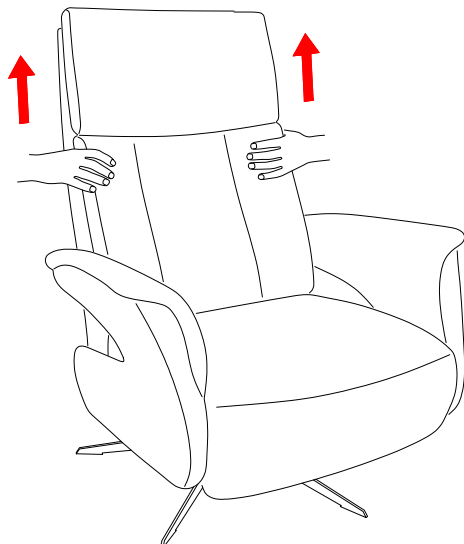


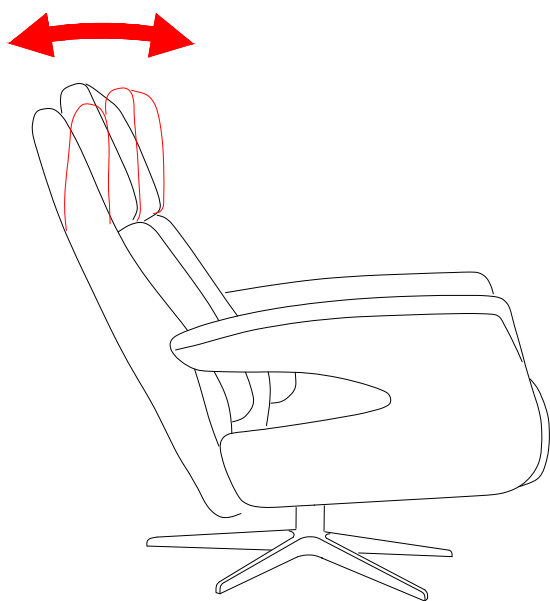
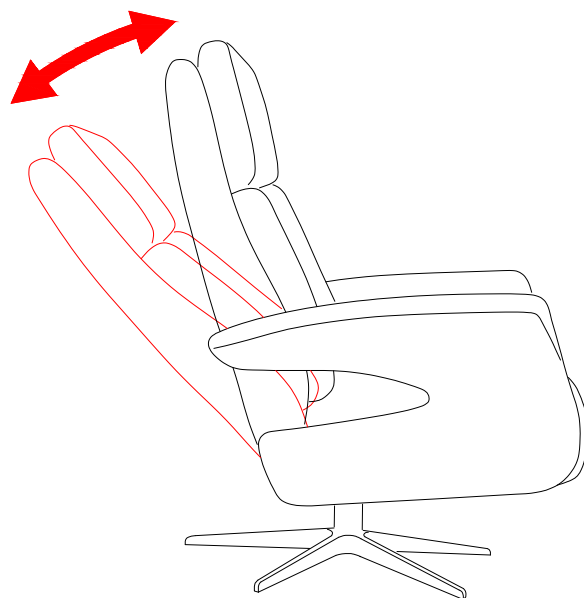
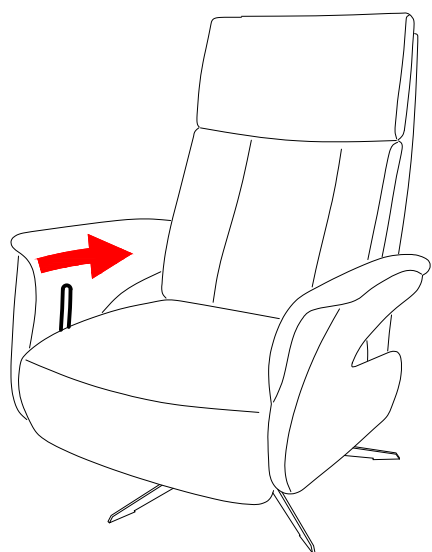


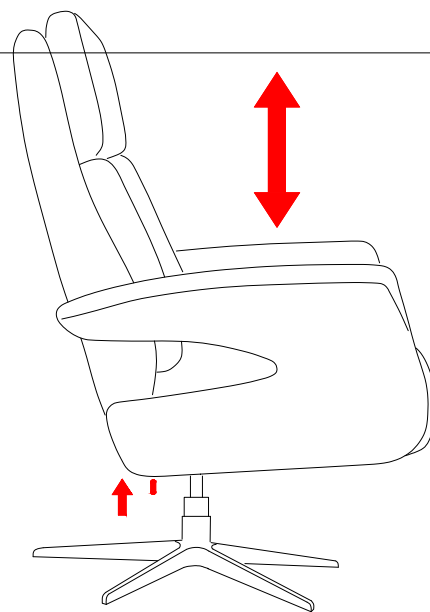

Exchange click plastic

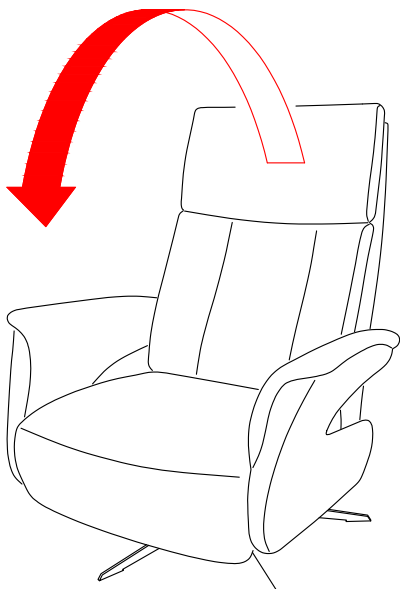 

bag with new click plastic

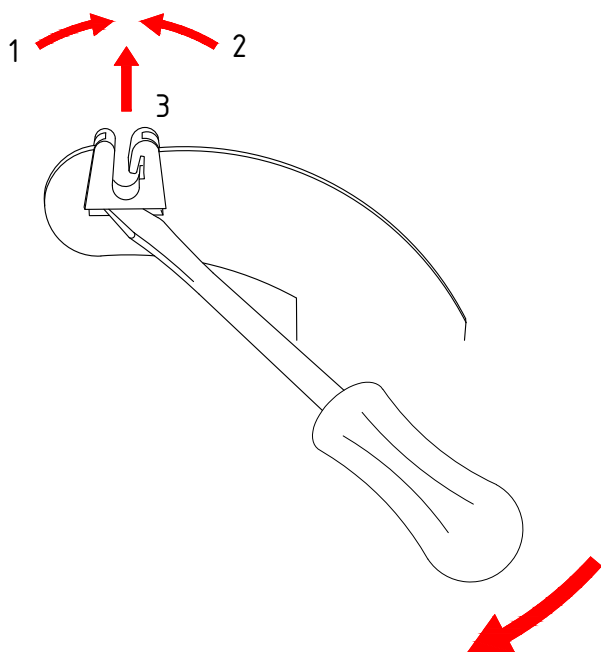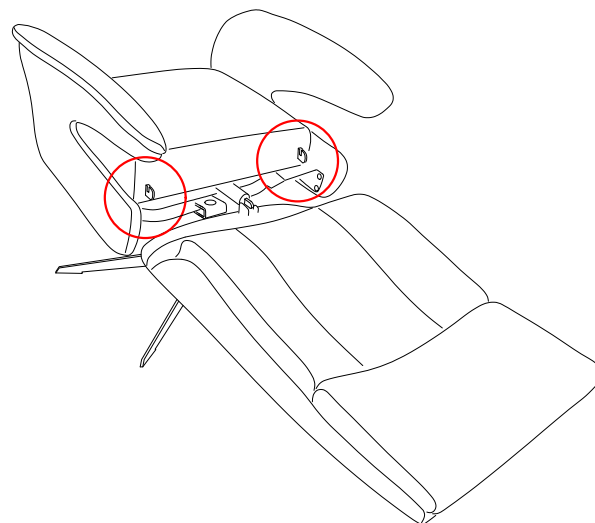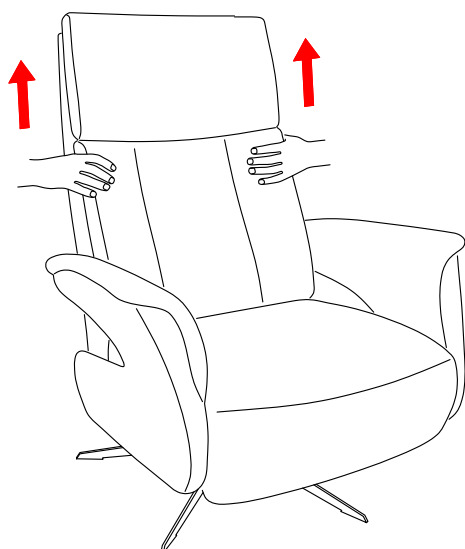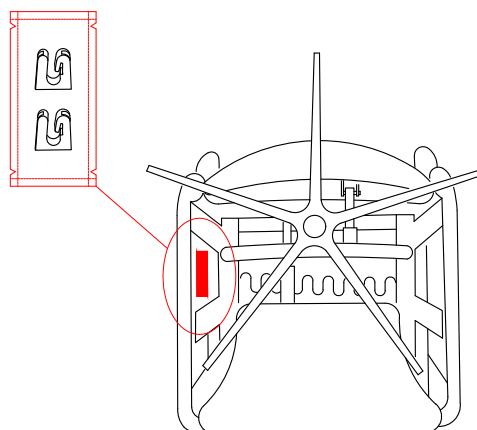    

new click plastic

