 
 
 


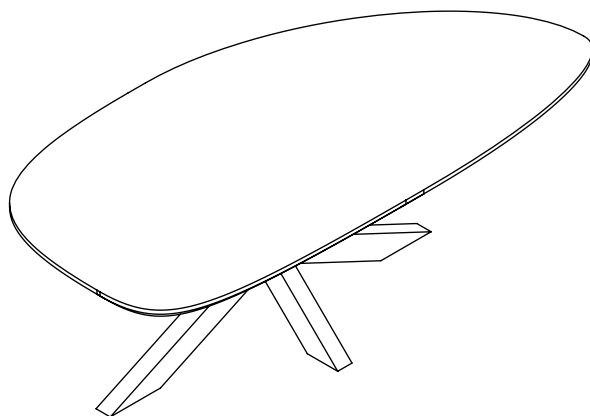


Possible legs

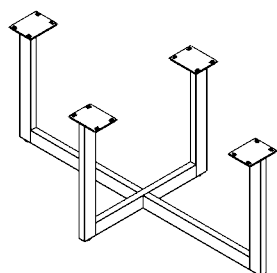


BST_78L

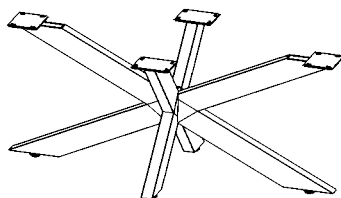

 BST_76/86

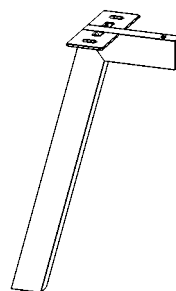

BST_77S/L

 

BST_70S/L


Package

Set for legs BST_78L

BST_78

05-002391

 
4LB

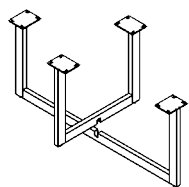

1X



 16X

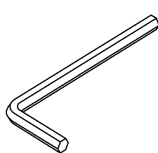

1X


Set for legs BST_77S/L

BST_77


05-000969

05-002391

 4LB




4X

 

4X



 8X

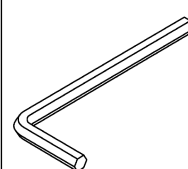


1X

Set for legs BST_76/86

BST_76/86

05-002391

 
4LB

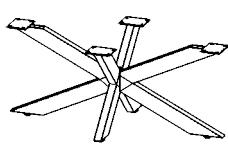

1X



 16X

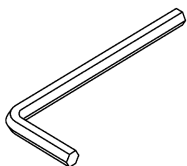

1X

Set for legs BST_70S/L

BST_70

 
03-001348

05-002391

4LB




4X

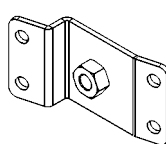

4X




 16X

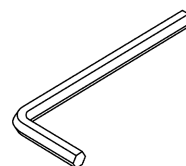


Example of installing legs BST78L

 
Step 1

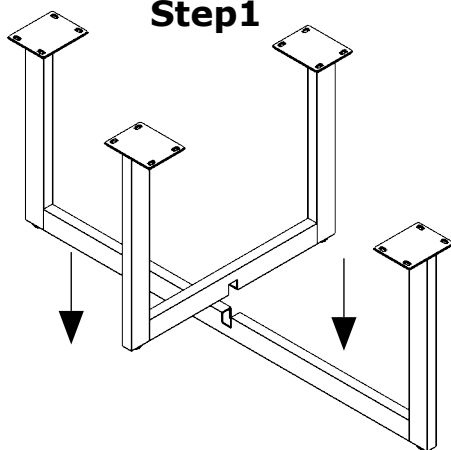

 Step 2

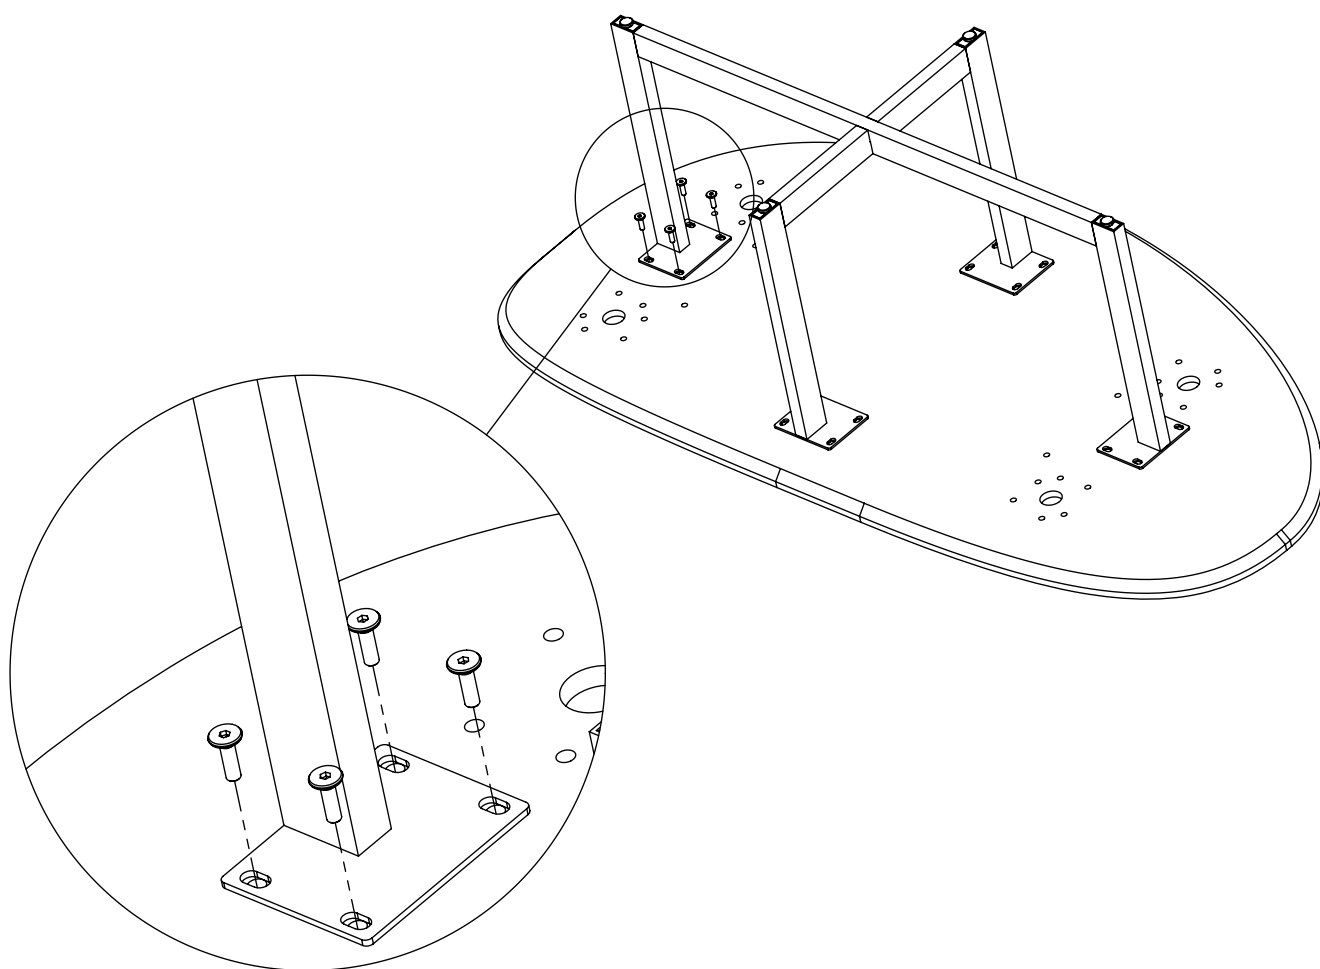


 Step 3

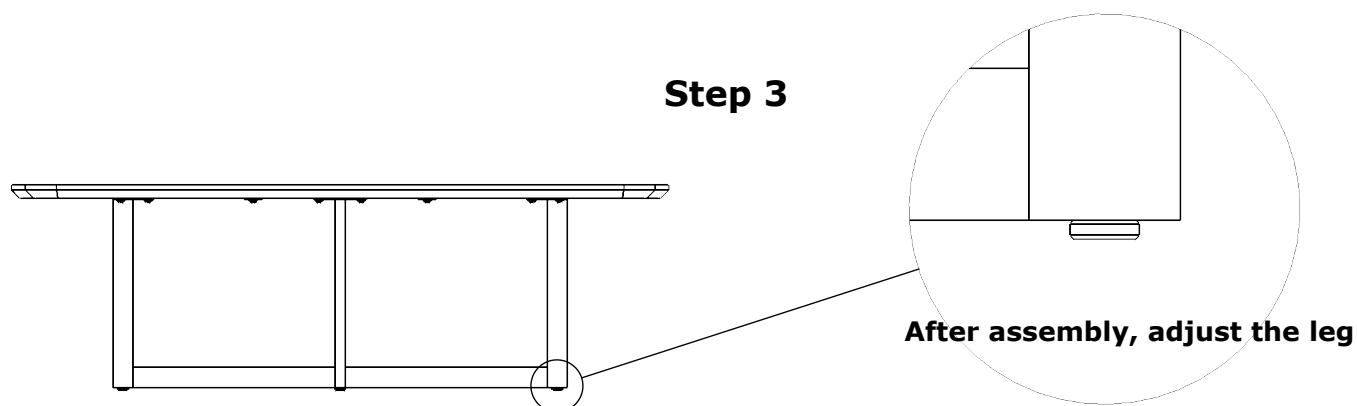


Example of installing legs BST76/86

 
Step 1

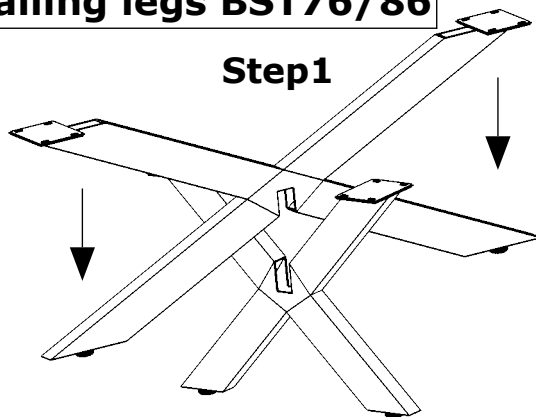


 
Step 2

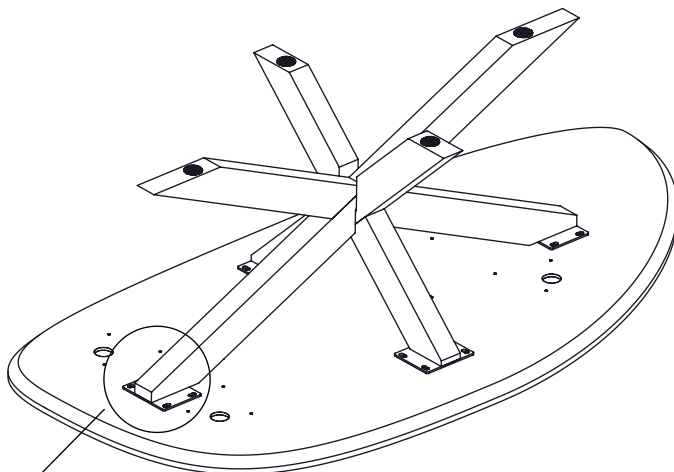

 Step 3

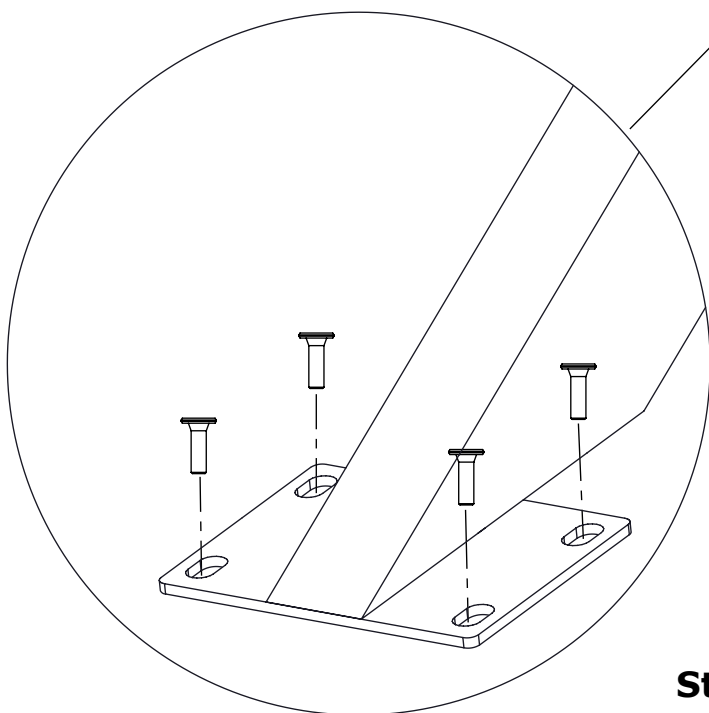


After assembly, adjust the leg

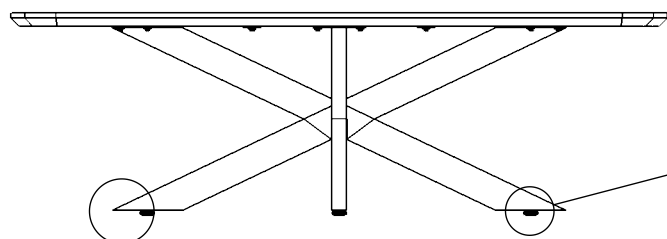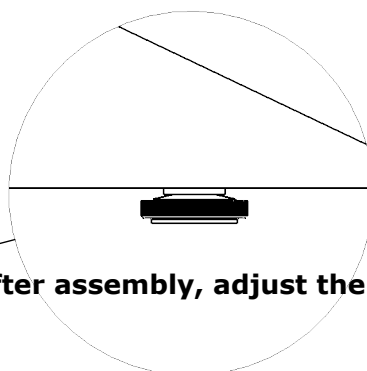  


Example of installing legs BST77

 Step 1

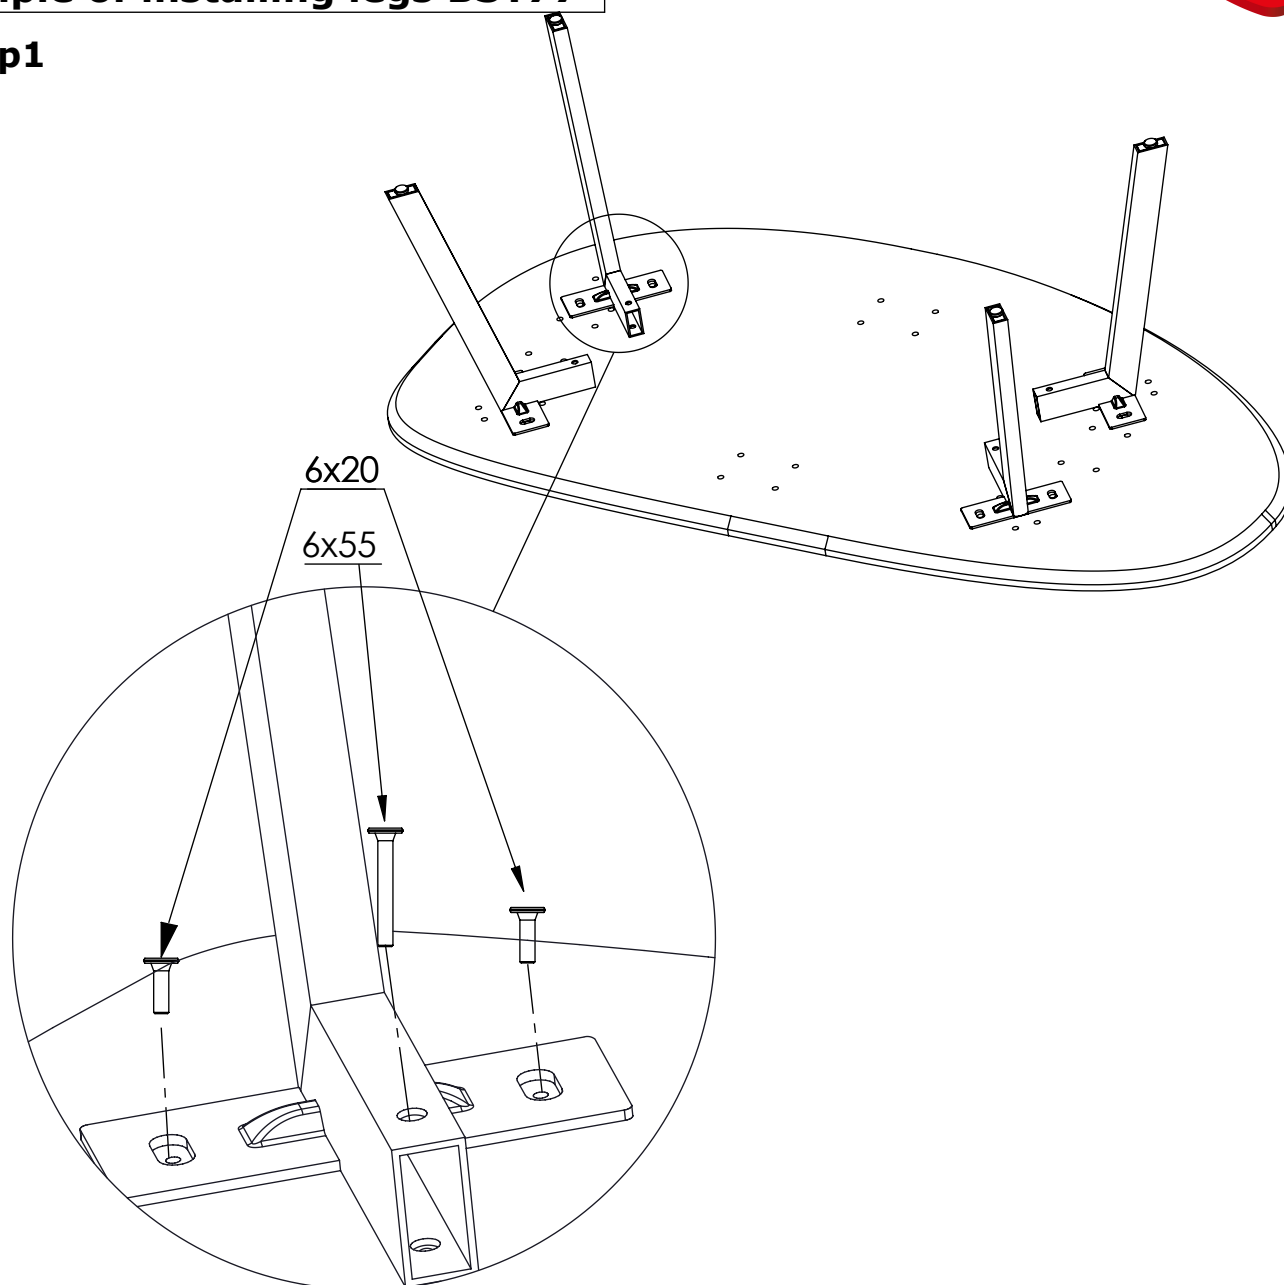


 Step 2

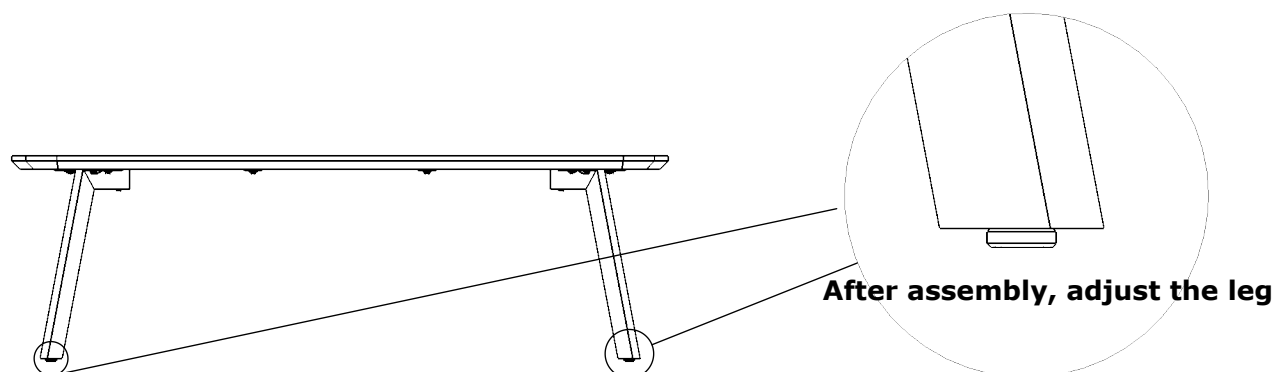


Example of installing legs BST70

 Step1

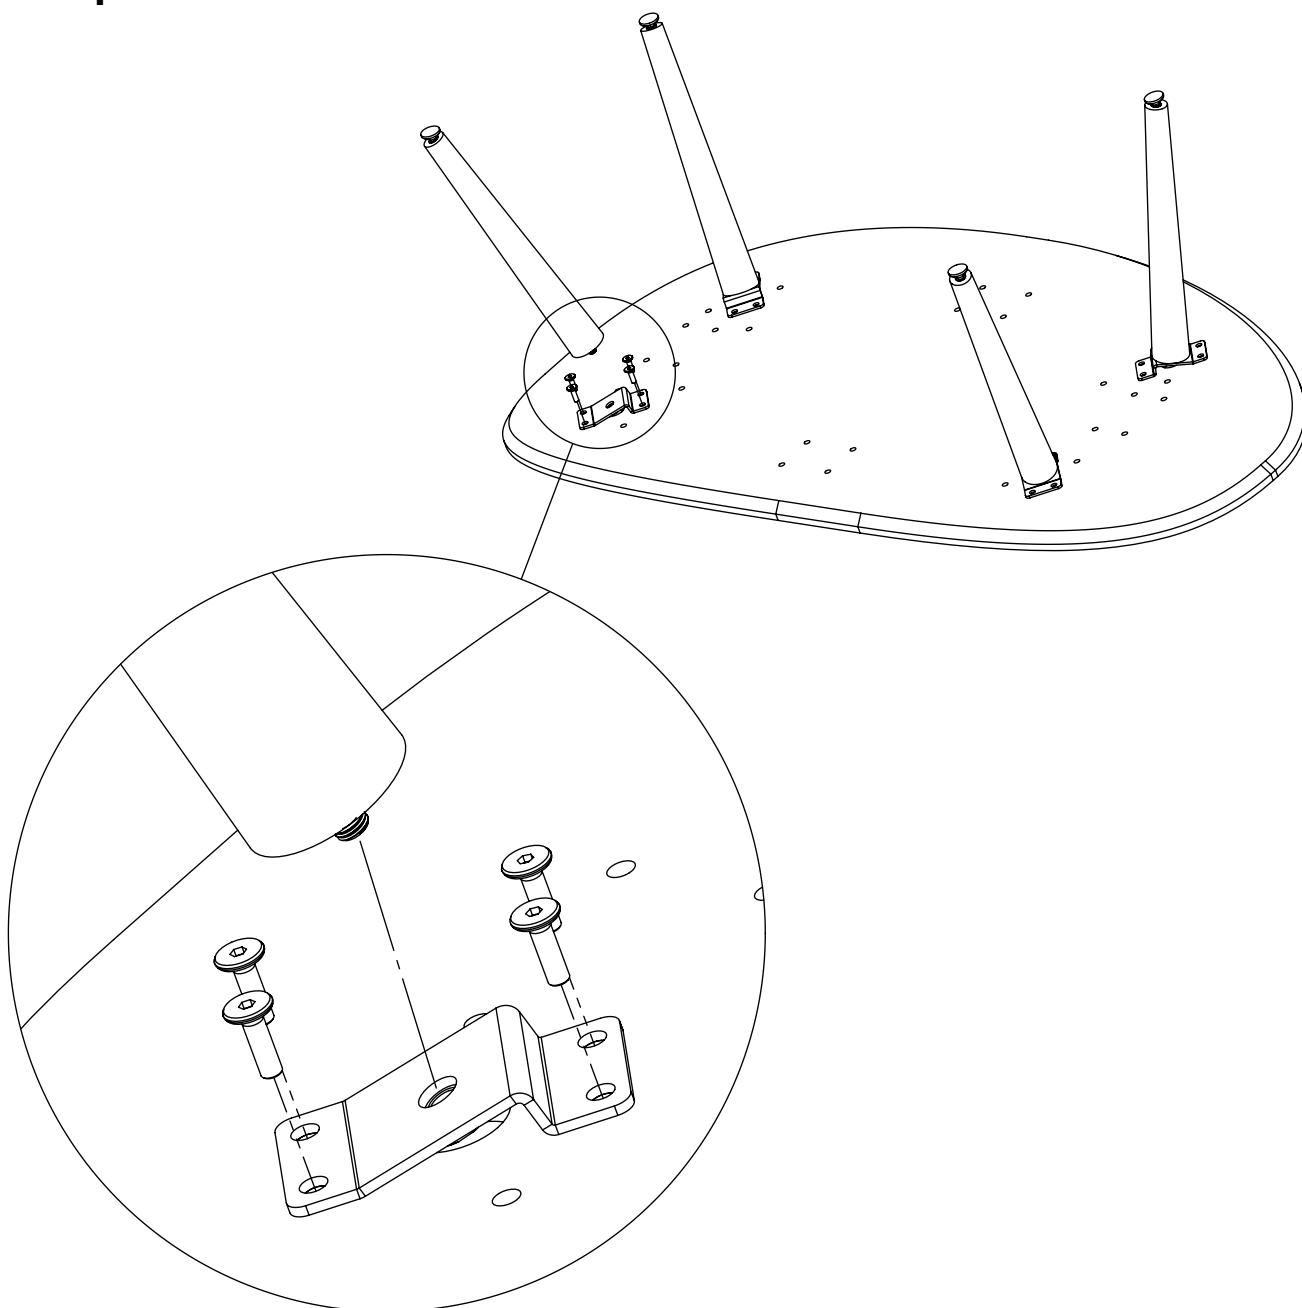

 Step 2

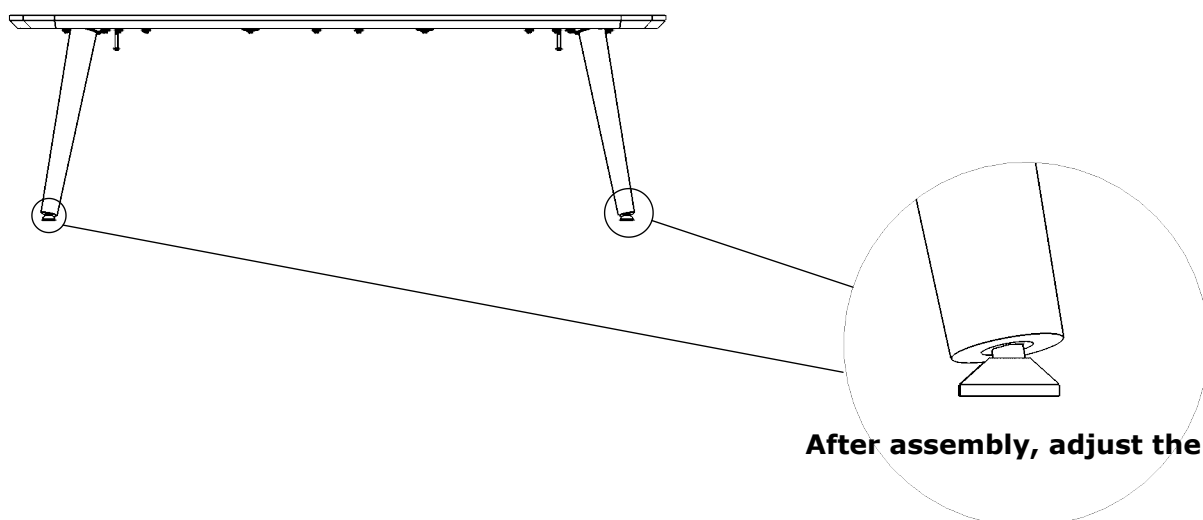

After assembly, adjust the leg