 
 
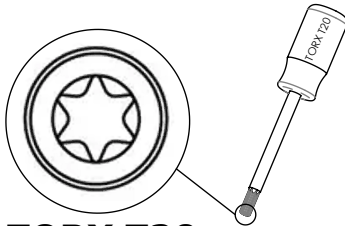 



15 min

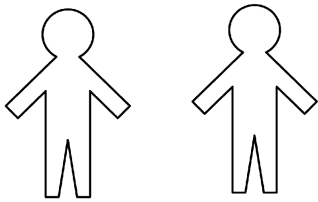


TORX T20

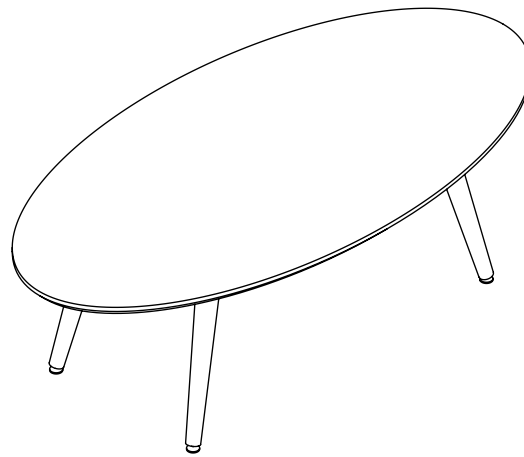

 
Possible legs

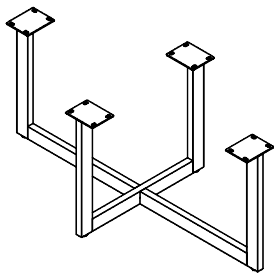


BST_78L

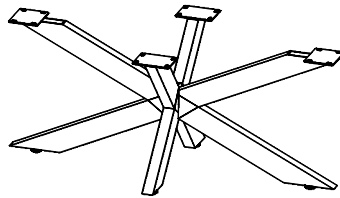 

BST_76/86

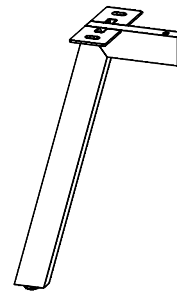 

BST_77S/L

 

BST_70S/L


Package

Set for legs BST_78L

BST_78

05-002007

 05-001808

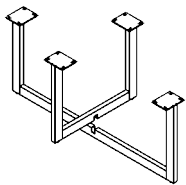

1X



16X



16X


Set for legs BST_77S/L

BST_77


05-000884

05-002007

 05-001808

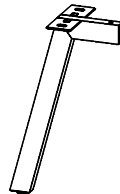


4X

 

4X



 8X




8X

Set for legs BST_76/86

BST_76/86

05-002007

 05-001808

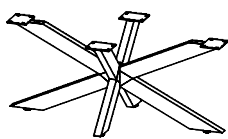

1X



16X




16X

Set for legs BST_70S/L


BST_70

03-001348

 
05-001042



4X

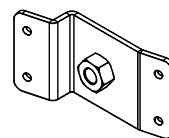 

4X

 


16X

Example of installing legs BST78L




PROFIJT
MEUBEL

 Step 1


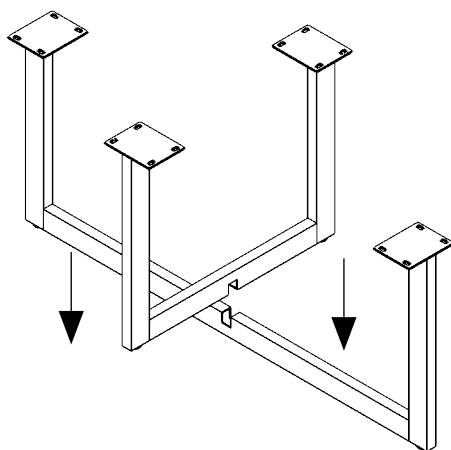


Step 2

   
Install the leg according to the dimensions indicated below and fasten with screws and washers

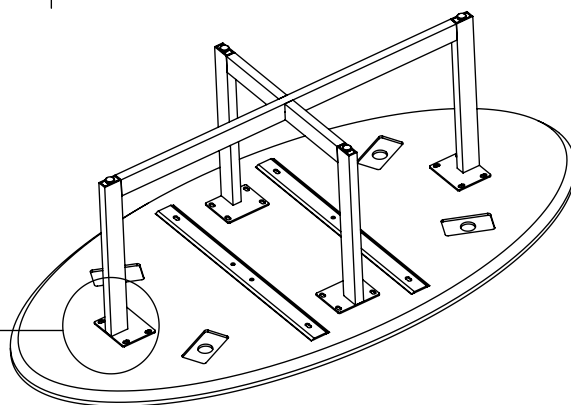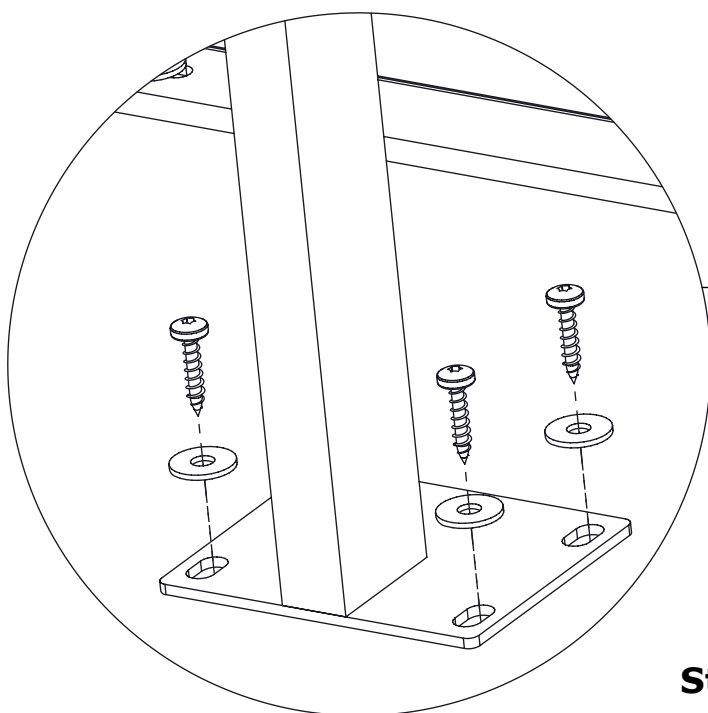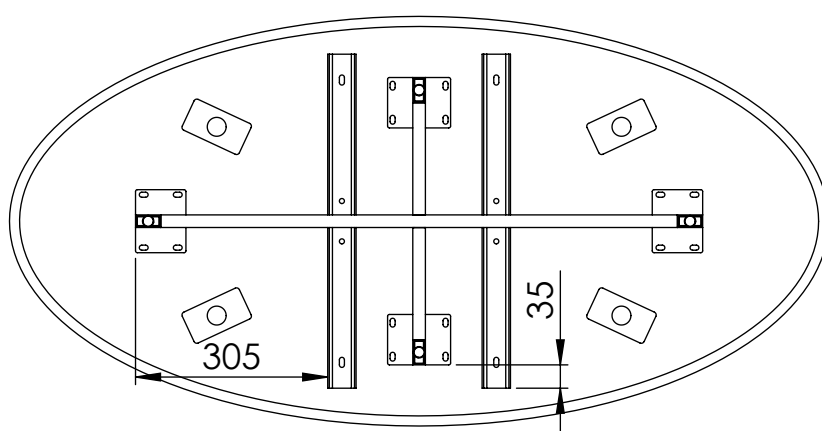



 
 
Step 3

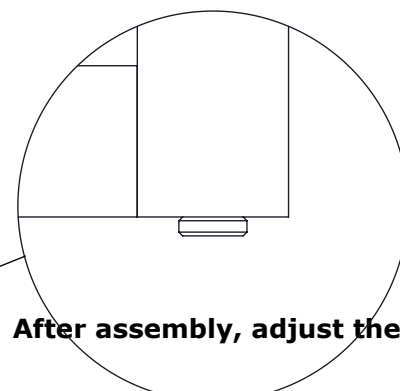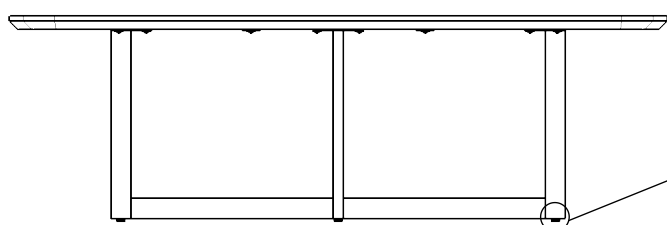

After assembly, adjust the leg

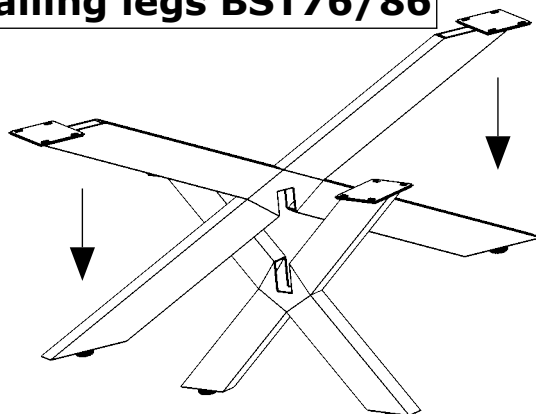 Example of installing legs BST76/86**Step 1****Step 2**

    Install the leg according to the dimensions indicated below and fasten with screws and washers

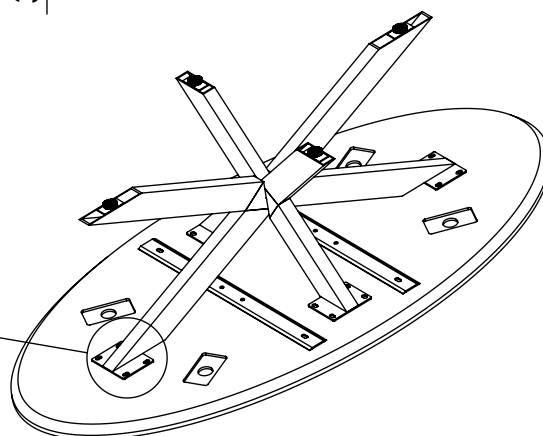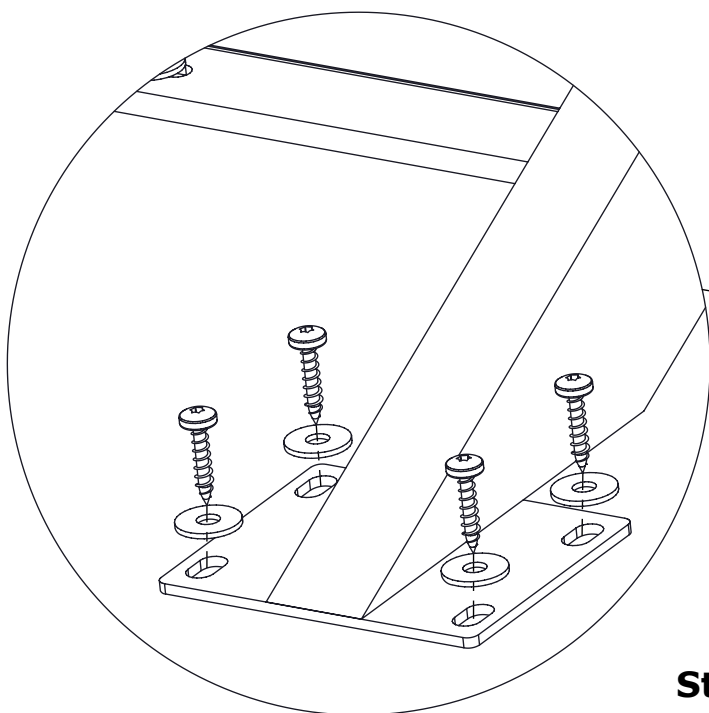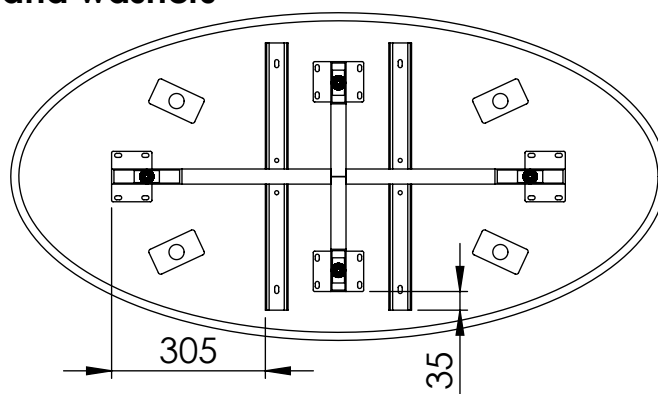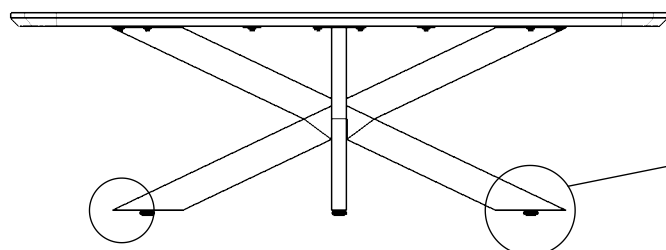
**Step 3**

After assembly, adjust the leg


Example of installing legs BST77

Step 1

 Install the leg according to the dimensions indicated below and fasten with screws and washers

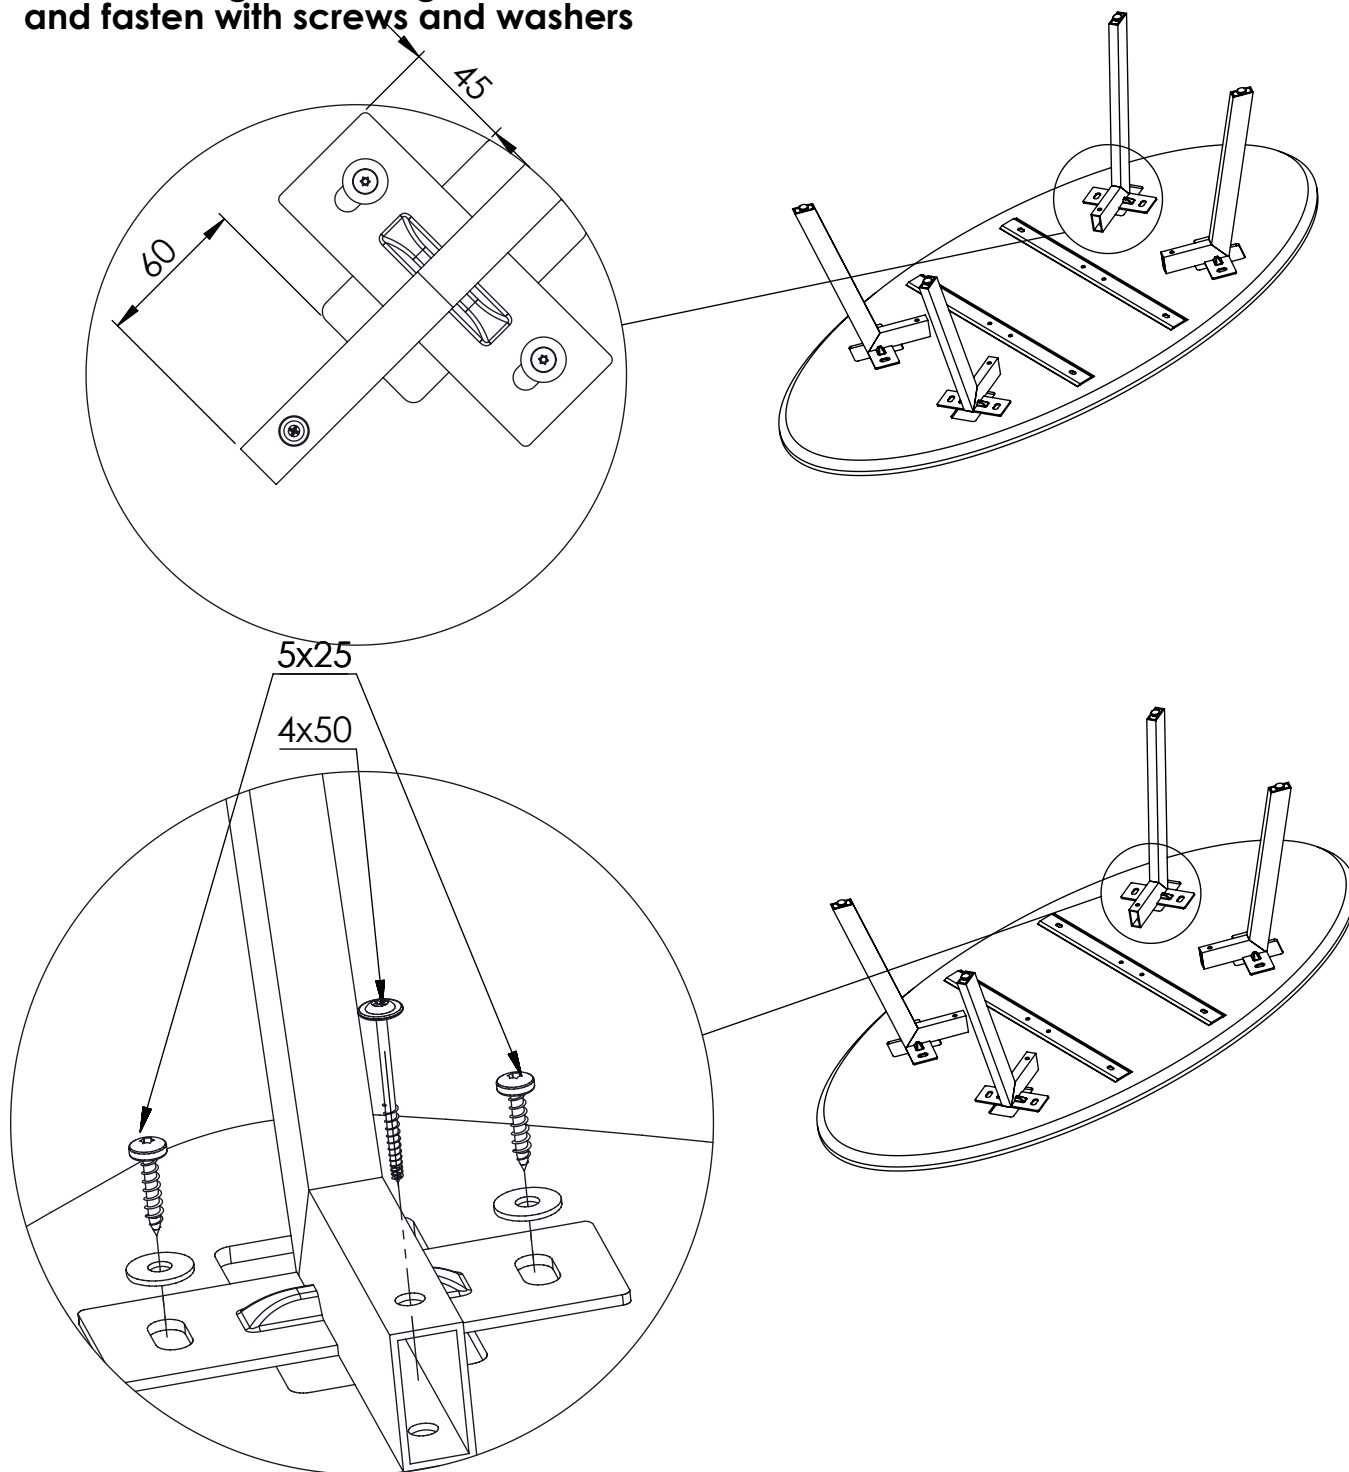


 
Step 2

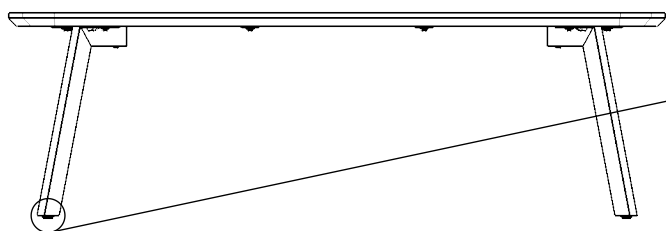



After assembly, adjust the leg

Example of installing legs BST70

 
 
Step 1

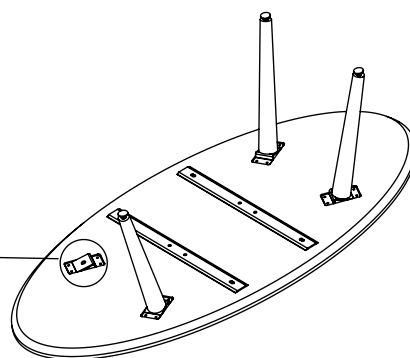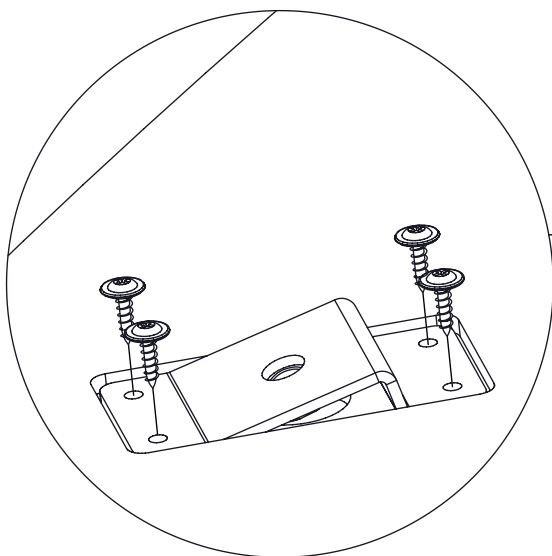

  Step 2

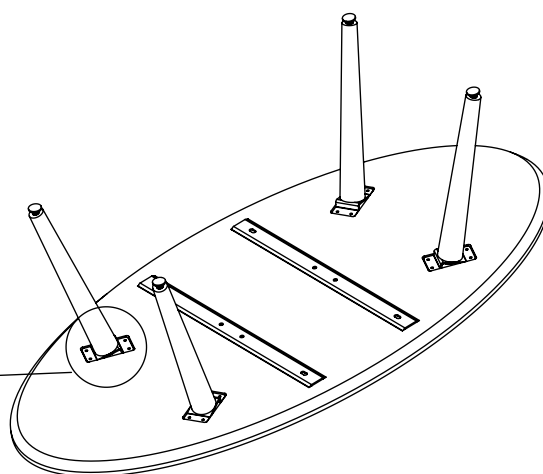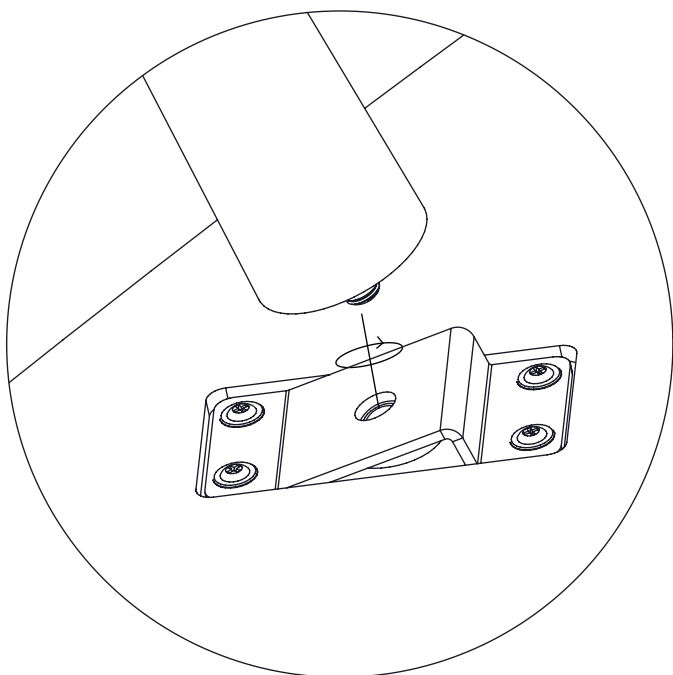

  Step 3

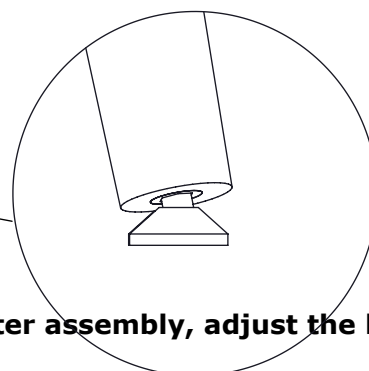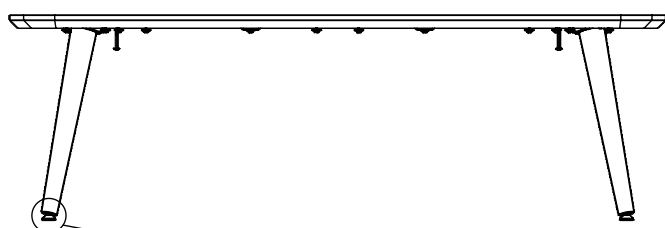

After assembly, adjust the leg