

Pairing the remote



GB – Pairing the Linak remote

1. Disconnect the chair from the mains and wait 30 seconds.
2. Reconnect power to the chair.
3. Wait for a while for the battery to beep.
4. Press and hold the top two buttons on the remote control until the beep sounds again.