 
 


INVERNO - Montagehandleiding

relaxfauteuil elektrisch verstelbaar 5-motorig met kantelfunctie

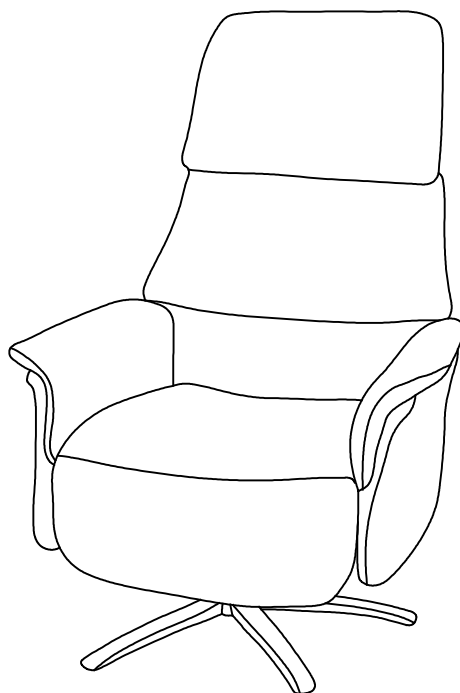

 
 
 
 
- The chair can only be used by children at least 8 years of age. People with reduced physical and intellectual abilities as well as people who don't have the knowledge nor experience of how to operate the chair can only use it under supervision or after being instructed how to use the chair in a safe way, so that all of the dangers are understandable for them.
- Children are not allowed to play with the chair.
- Children are not allowed to carry out the cleaning nor maintenance of the chair.
- The chair may only be used with the supplied power adapter
- The chair may only be powered from a network 220-230 VAC 50 Hz UE; 110-120 VAC 60 Hz USA.

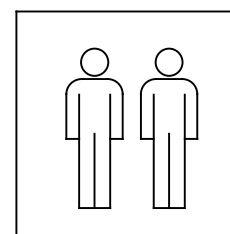


two people

Components of the chair:


1. Headrest
2. Backrest
3. Right armrest
4. Left armrest
5. Remote control
6. Seat
7. Footrest
8. Central part
9. Base

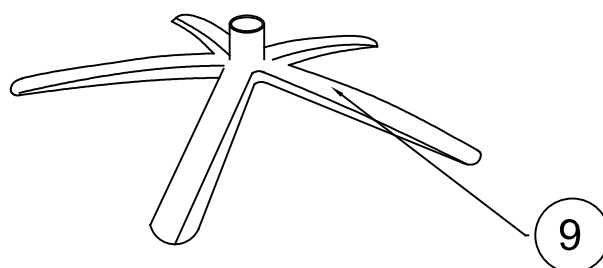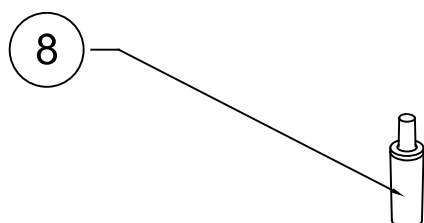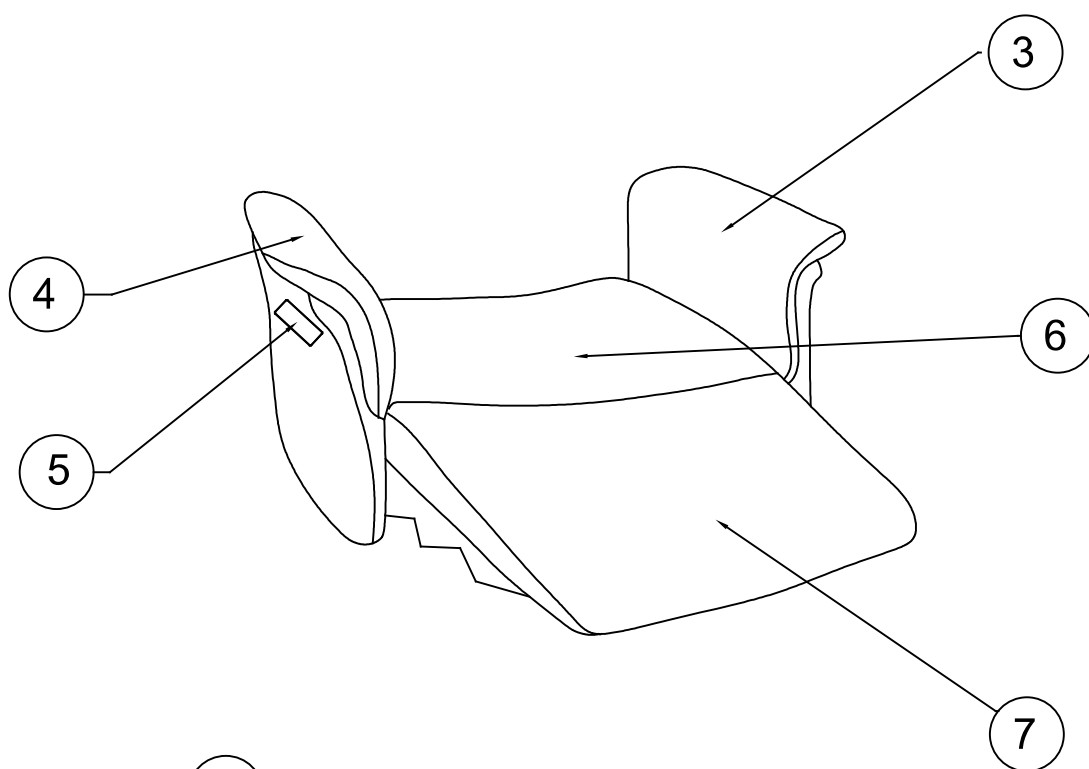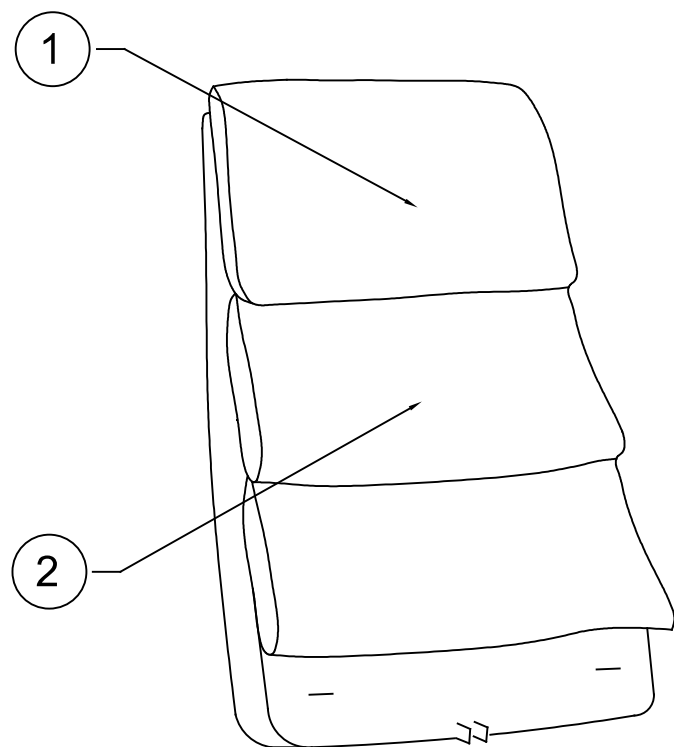

 
2.1

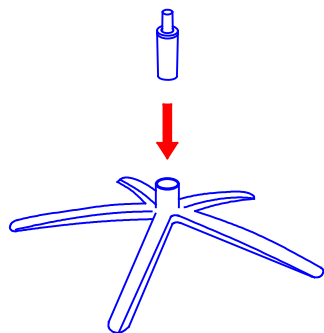

 
2.2

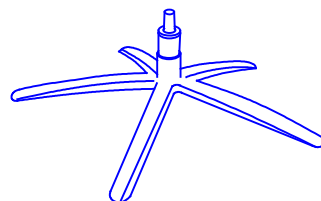



 
3.1

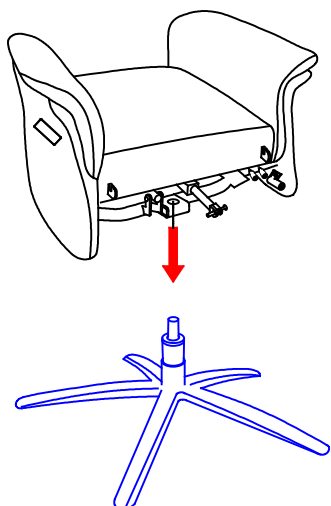

 
3.2

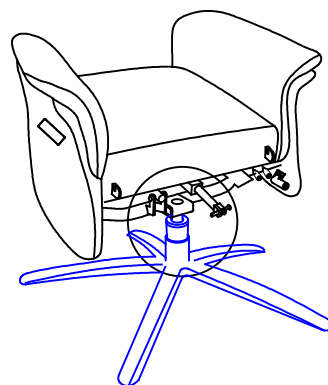

   
3.3

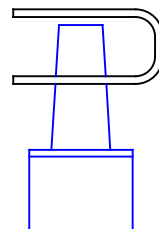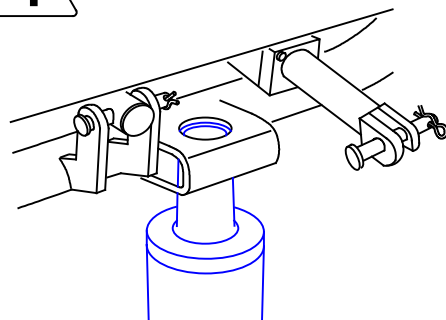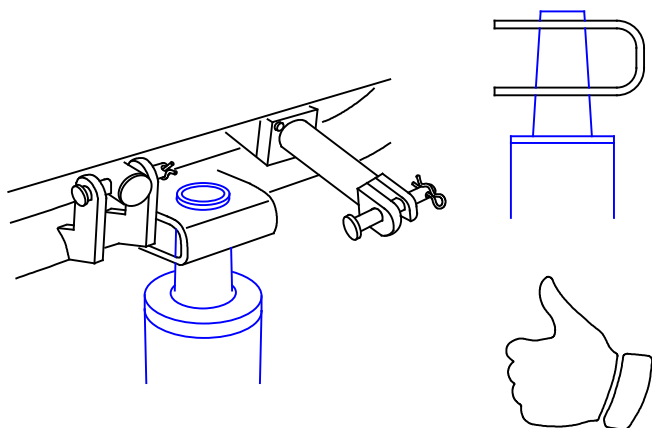

 4.1

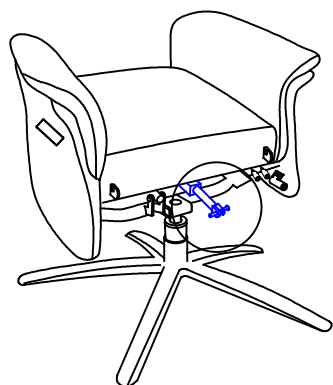

 4.2

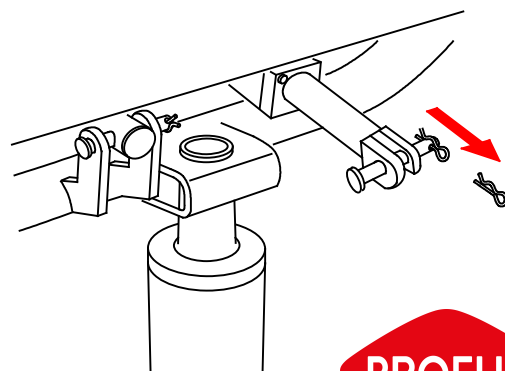

A line drawing of a cable bracket assembly. A horizontal cable runs across the top. A bracket is mounted to the cable, featuring a circular opening. A vertical rod passes through the bracket and a cylindrical base below it. A small pin or screw is shown separately, likely for securing the bracket to the cable.




A line drawing of a chair with a reclining mechanism. The chair is shown in a reclined position. A circle highlights the internal mechanical components of the reclining system, including various levers, springs, and adjustment knobs. The chair has a high backrest and a padded seat.



[illegible]

Connection
marker label

 
6.1

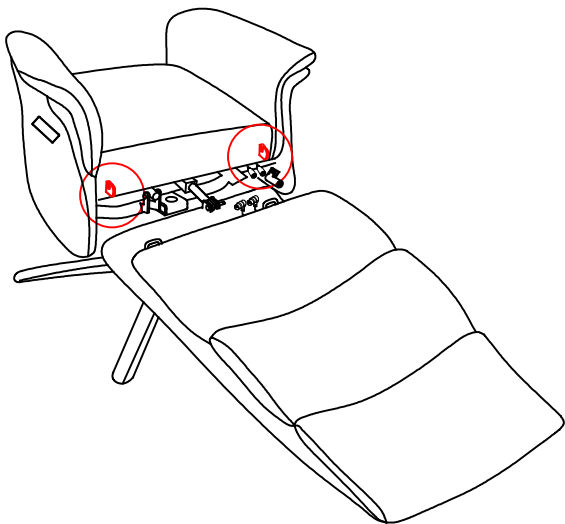

  
6.2

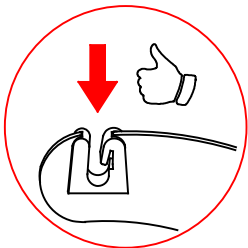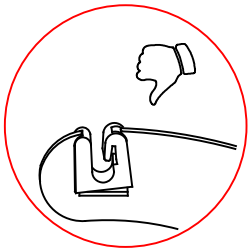

Check if the system
click is blocked


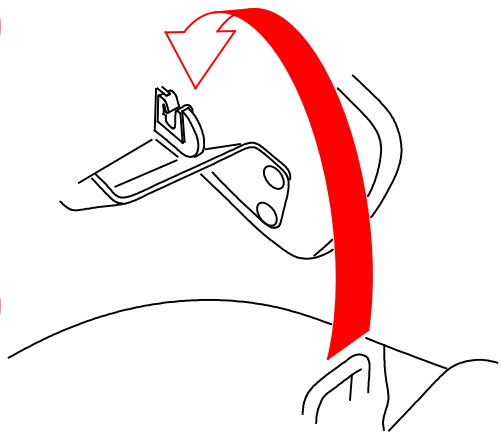 


 6.3


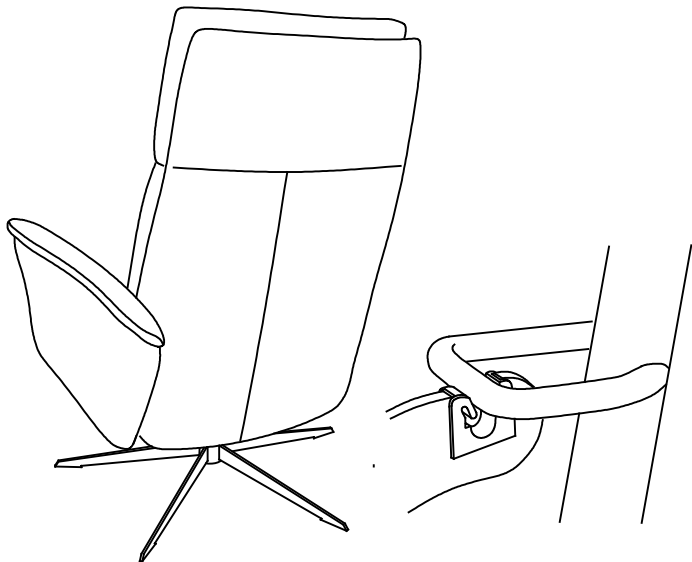


6.4

 
 
Silent click

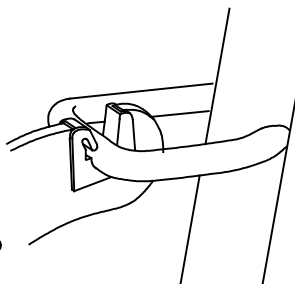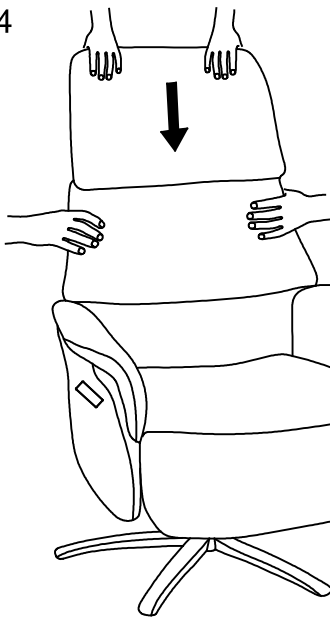

  
Make sure the backrest is
properly attached

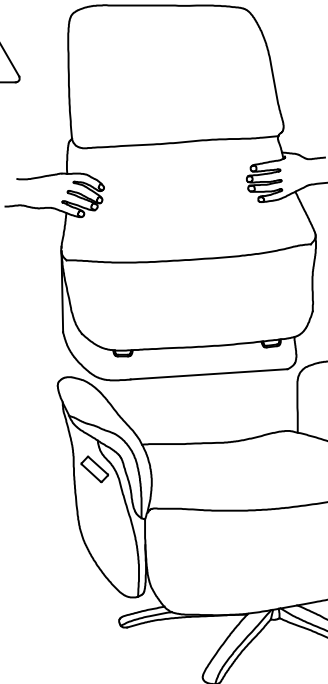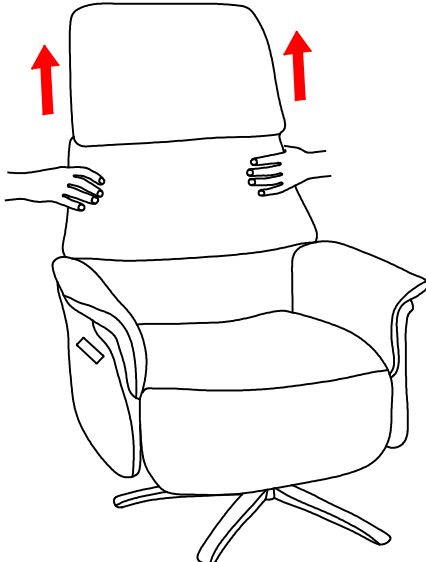

To move the chair, hold the armrests.









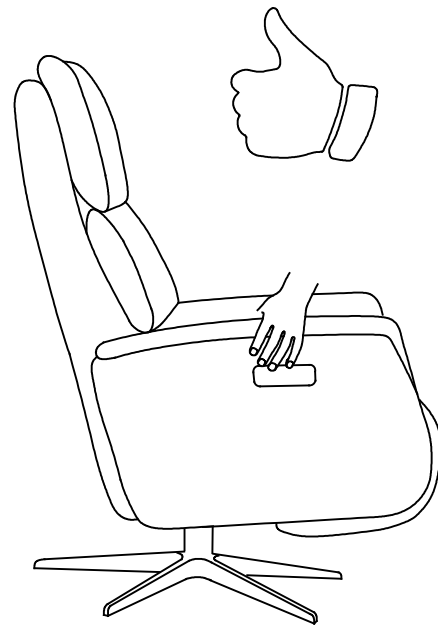 
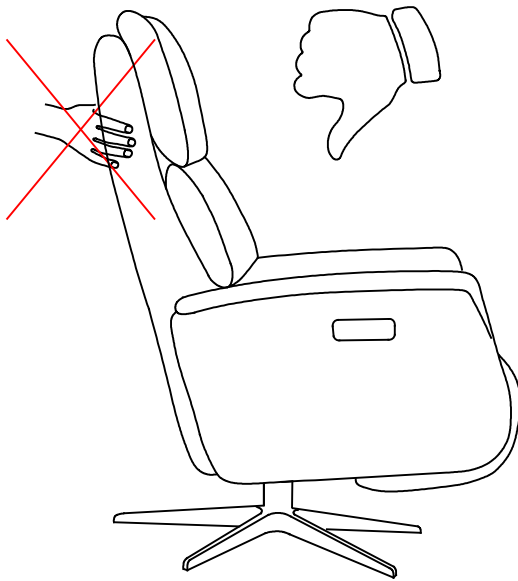 











Connecting magnetic charging.

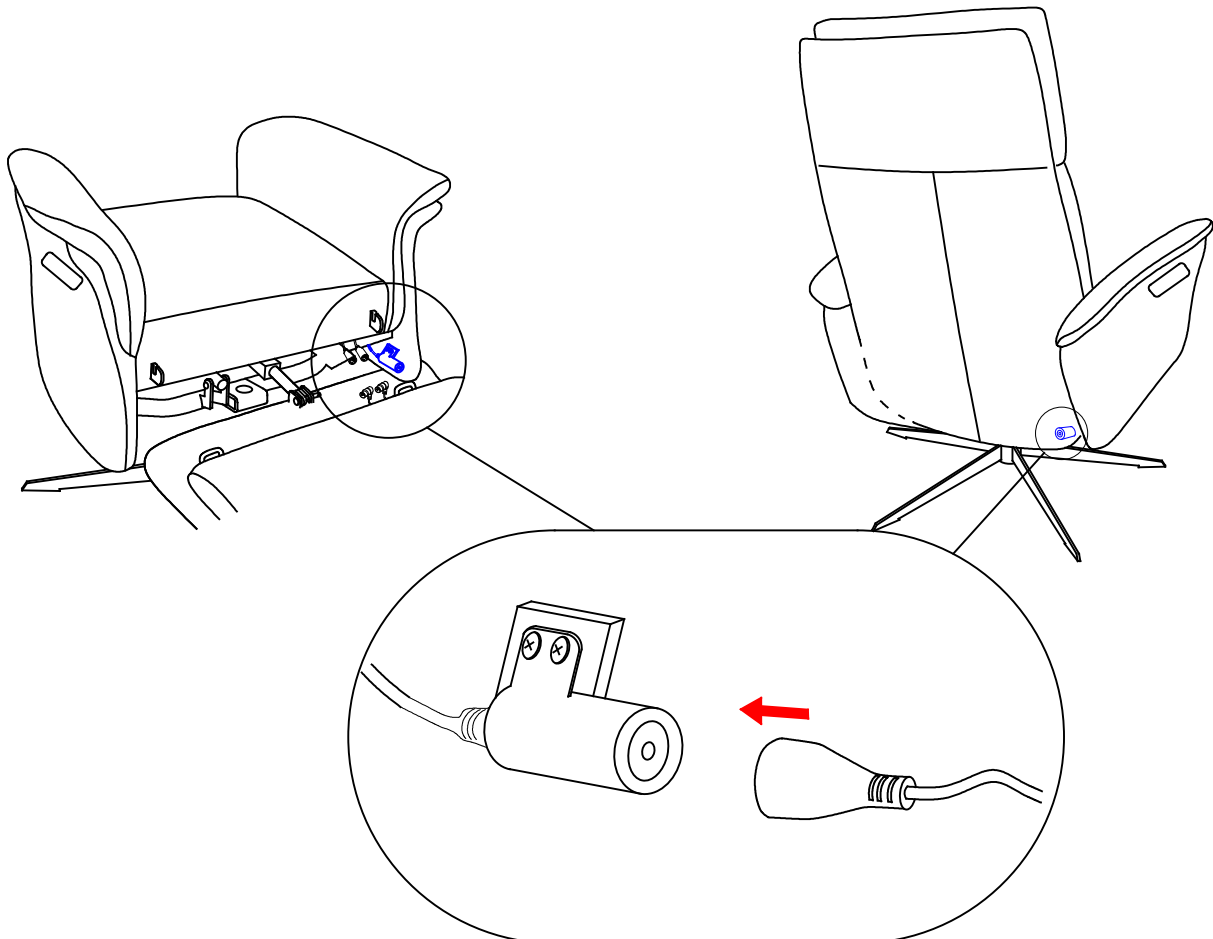 


Importantly !!!

                   When connecting to the electrical network for the first time, always press and hold the "Home" button  for 5 seconds.

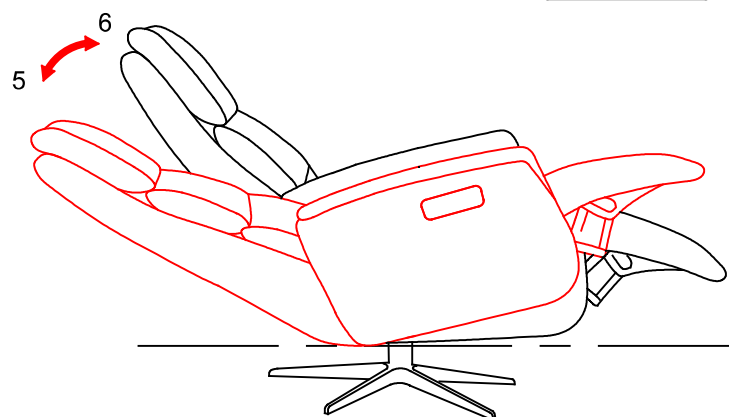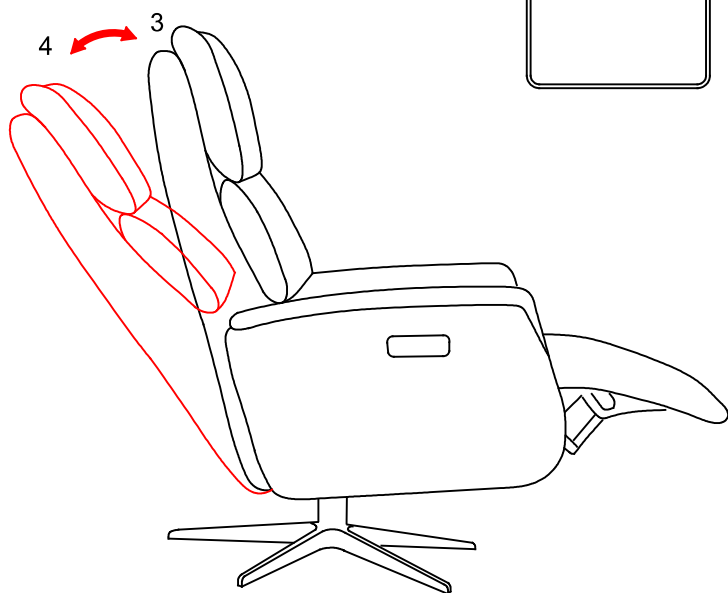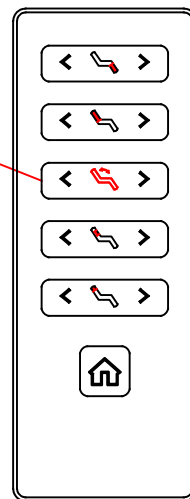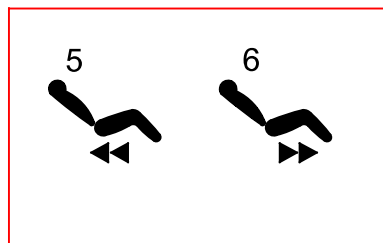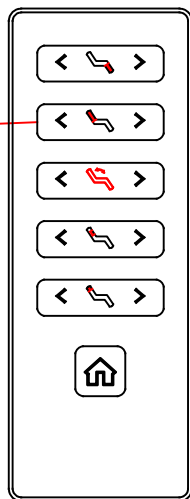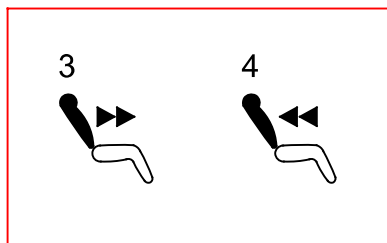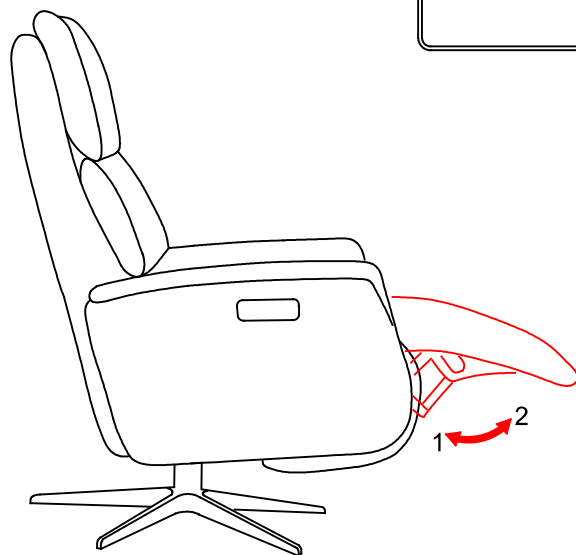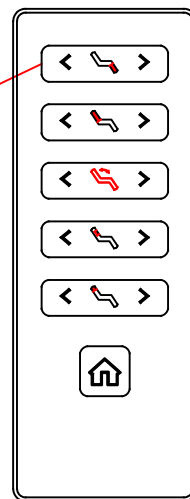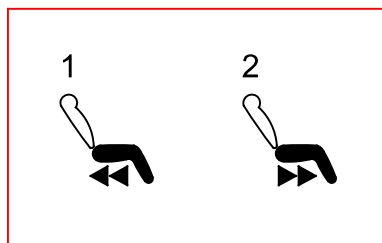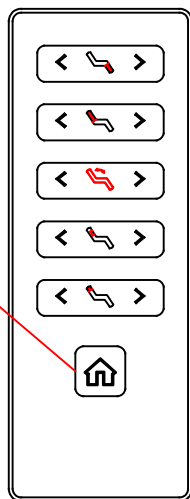


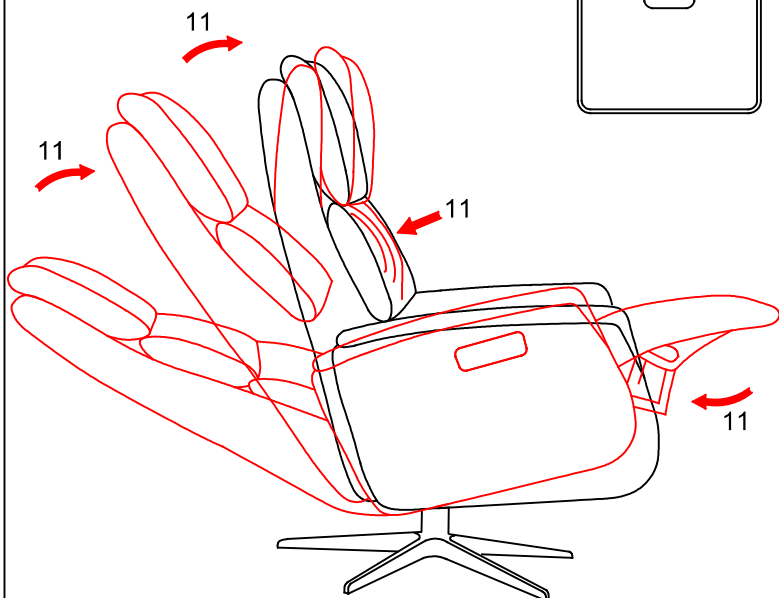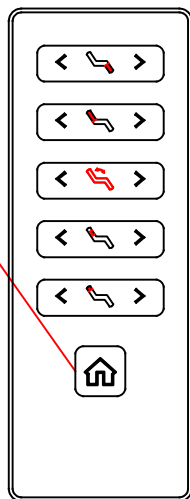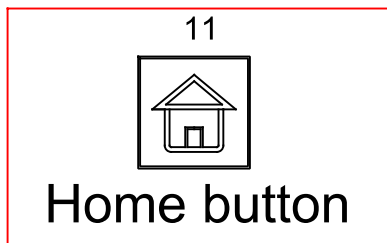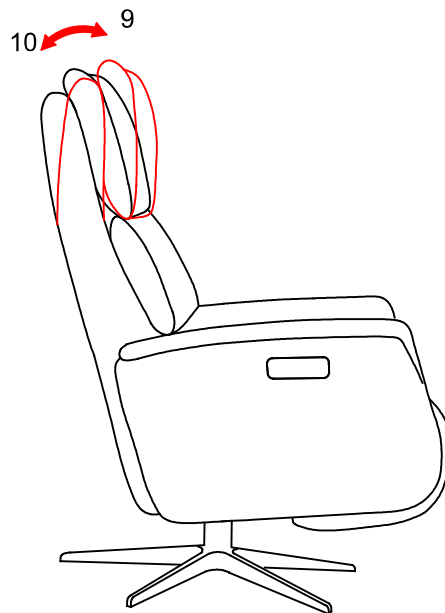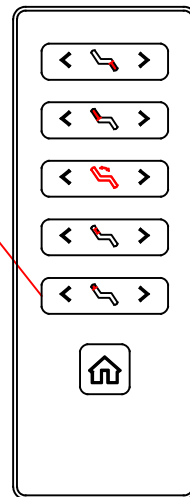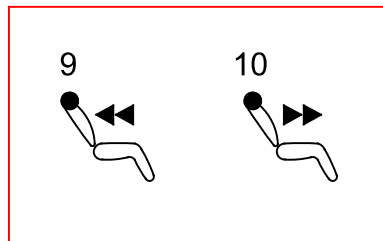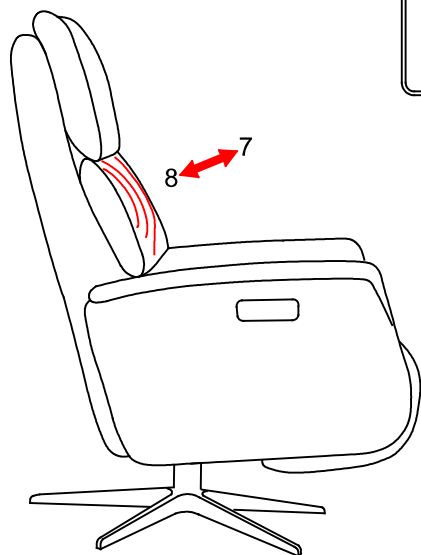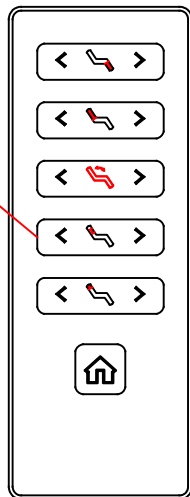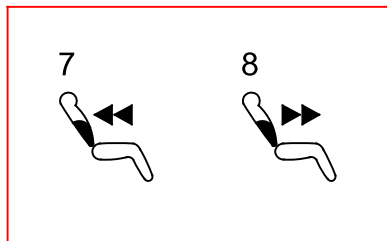




 
Fully charge the battery chair, and remote control before first use.
Do not allow the devices to fully discharge, as this may reduce battery life.

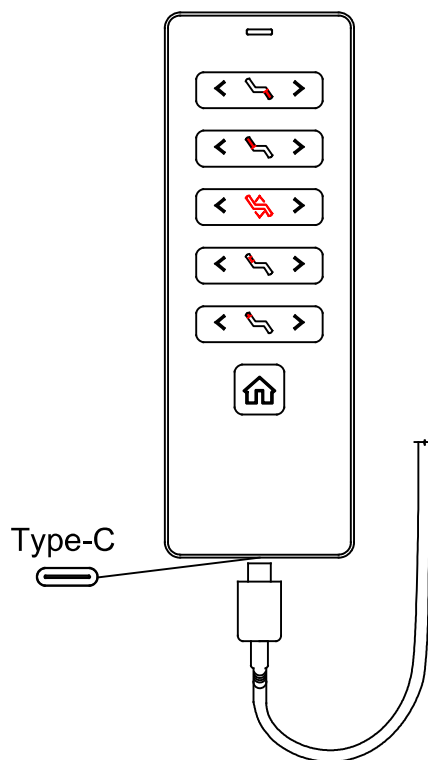


Exchange click system

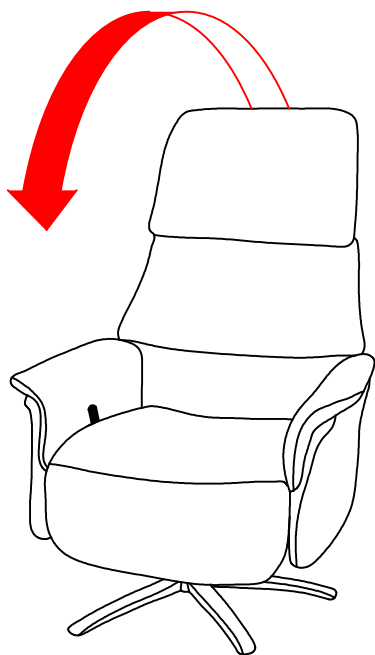 

bag with new click system

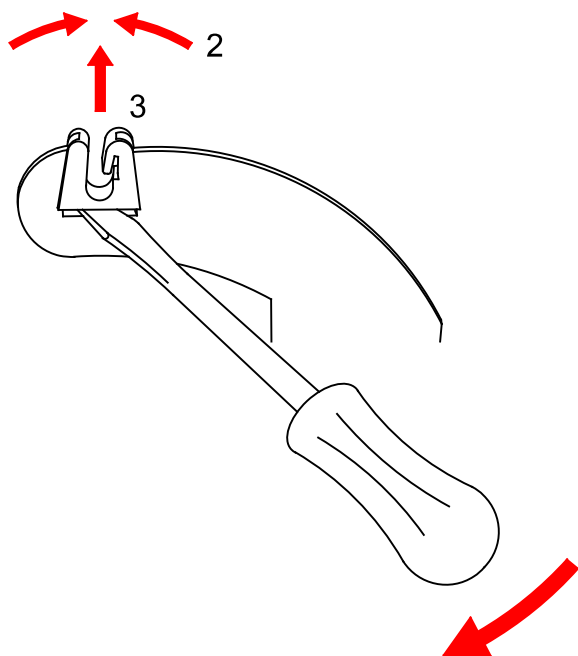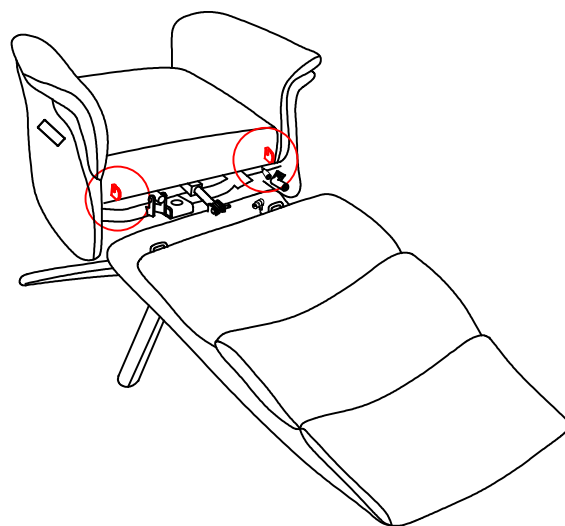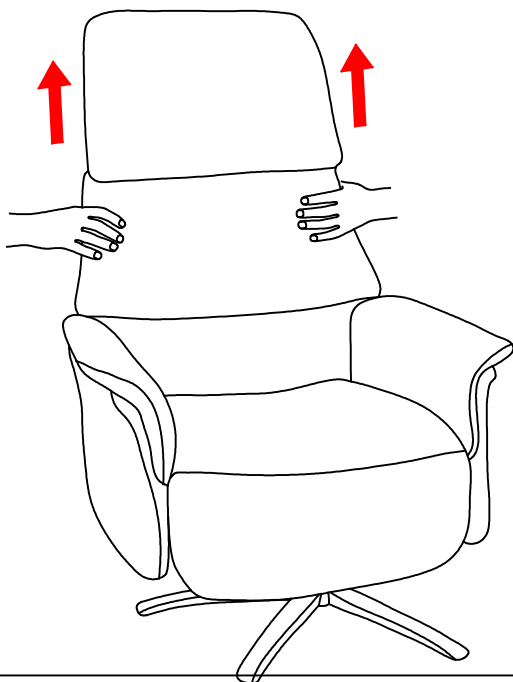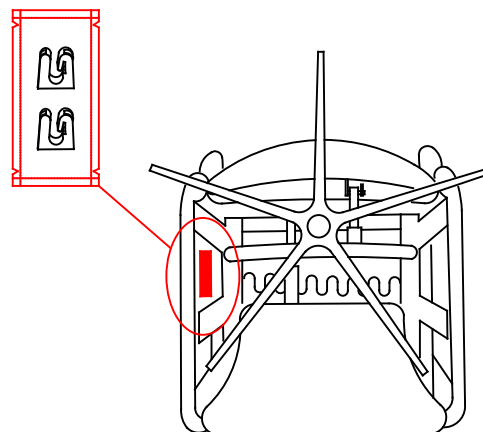    

new click system

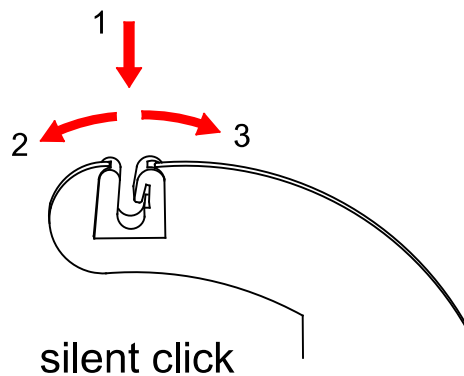 

silent click



The use of an upholstered piece of furniture with a functional mechanism promotes metal abrasion underneath the furniture.

This must be removed from time to time by vacuuming or wiping.

If an armchair is used for purposes other than intended and not in accordance with the instructions, it may tip over.

However, this is not a reason for complaint and does not constitute a quality defect.