 
 



15 min

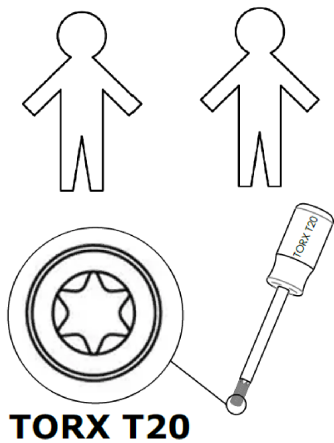


TORX T20

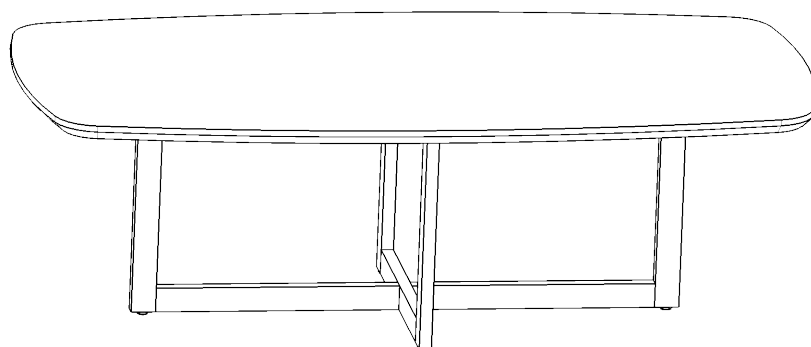

 
Possible legs

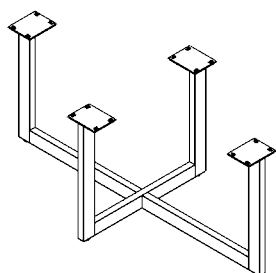


BST_78L

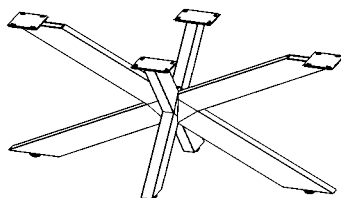 

BST_76/86

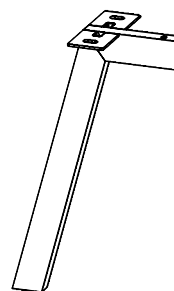 

BST_77S/L

 

BST_70S/L


Package

Set for legs BST_78L

BST_78

05-002007

 05-001808

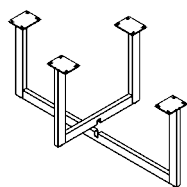

1X



16X



16X


Set for legs BST_77S/L

BST_77

05-000884

05-002007

 05-001808

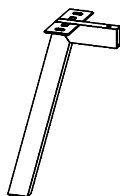

4X



4X



8X




8X

Set for legs BST_76

BST_76

05-002007

 05-001808

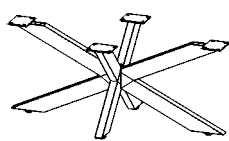

1X



16X



16X

Set for legs BST_70S/L


BST_70

03-001348


05-001042



 4X

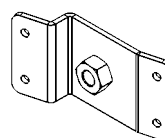


4X

 

16X




Example of installing legs BST78L

 Step 1

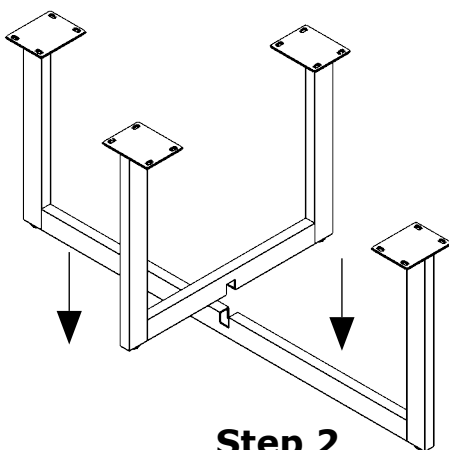


Step 2

   Install the leg according to the dimensions indicated below and fasten with screws and washers

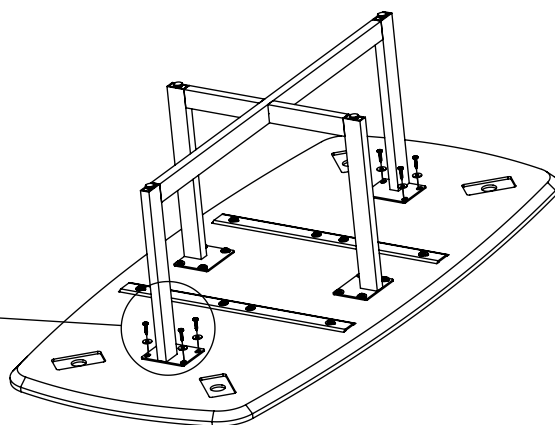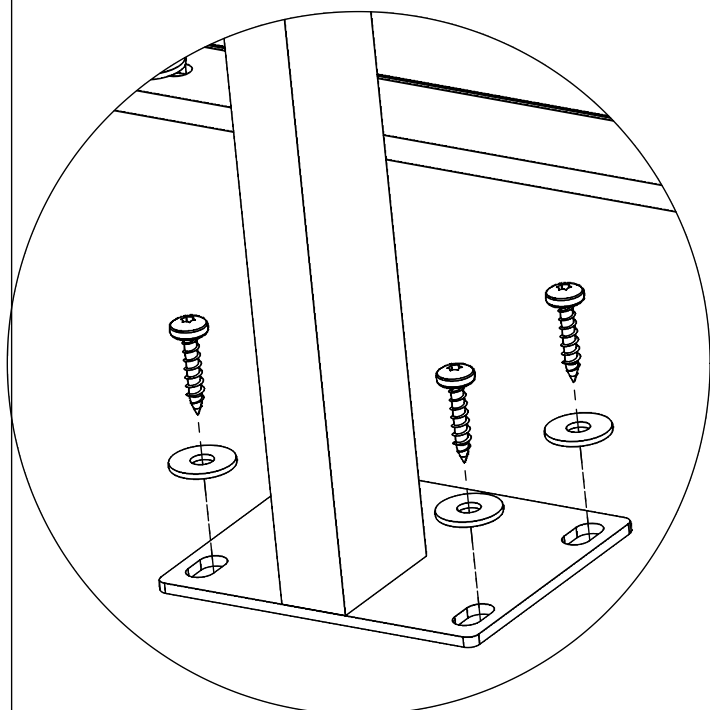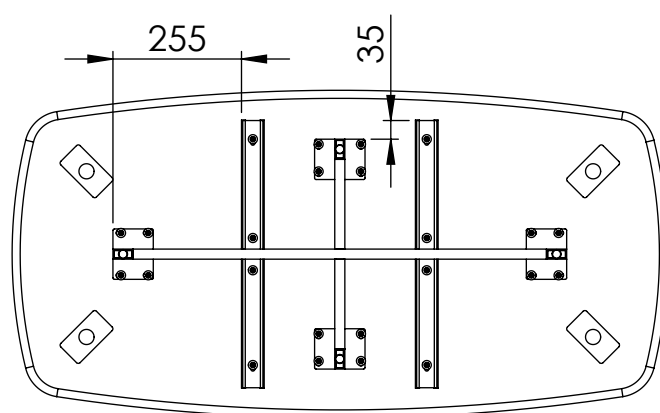

 
Step 3

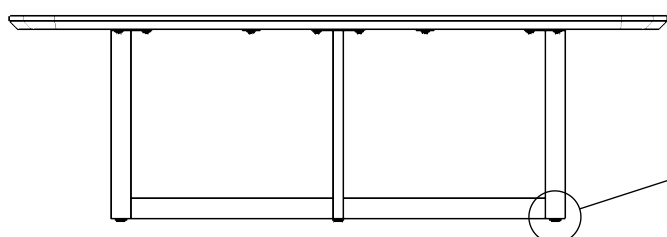

After assembly, adjust the leg




Example of installing legs BST76/86

 Step 1

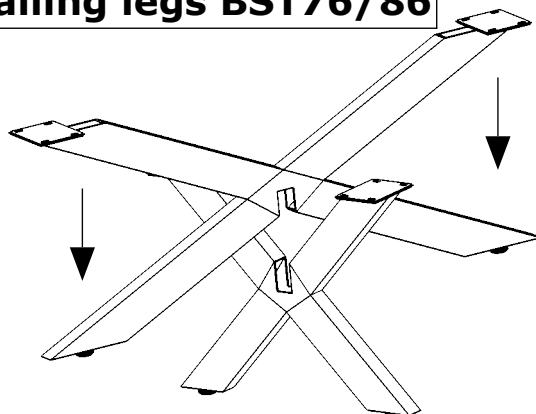


Step 2

   
Install the leg according to the dimensions indicated below and fasten with screws and washers

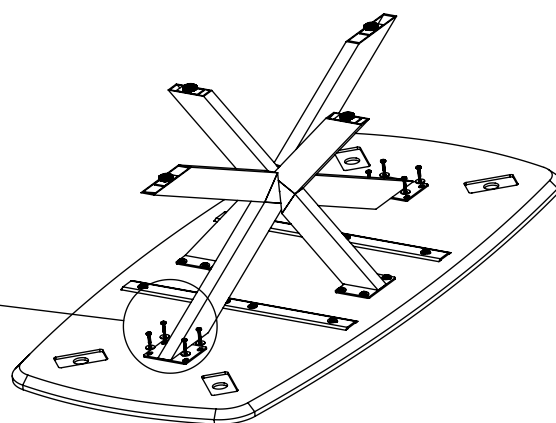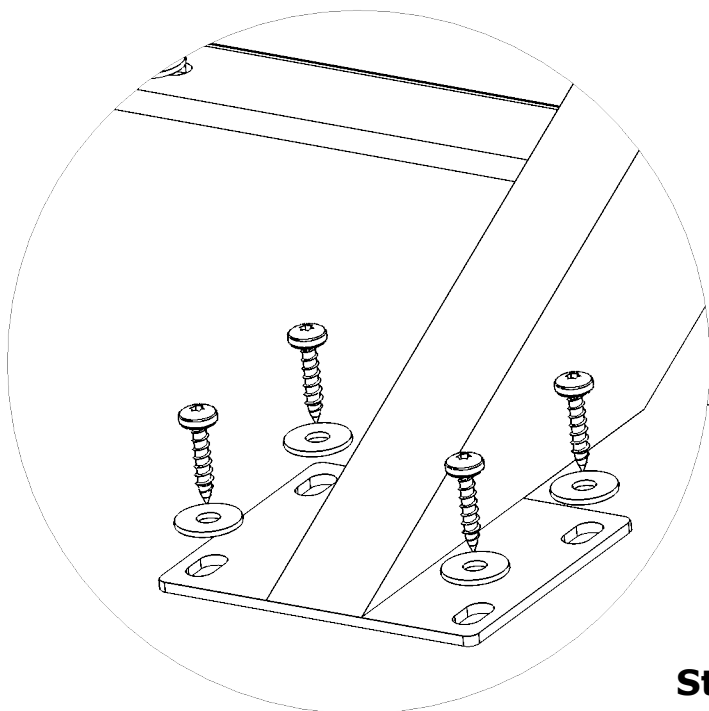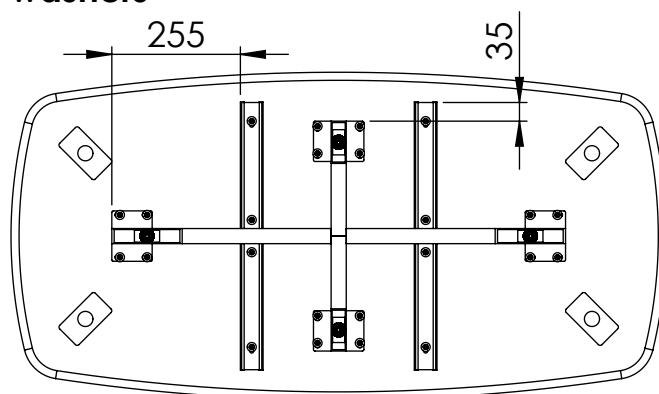

 Step 3

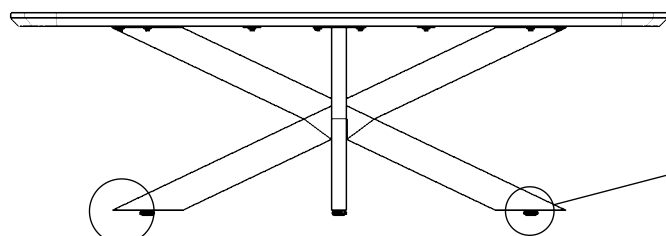





After assembly, adjust the leg

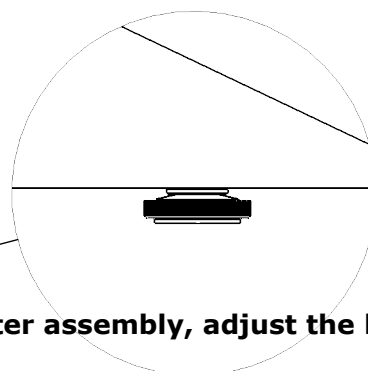 


Example of installing legs BST77

Step 1

    Install the leg according to the dimensions indicated below and fasten with screws and washers

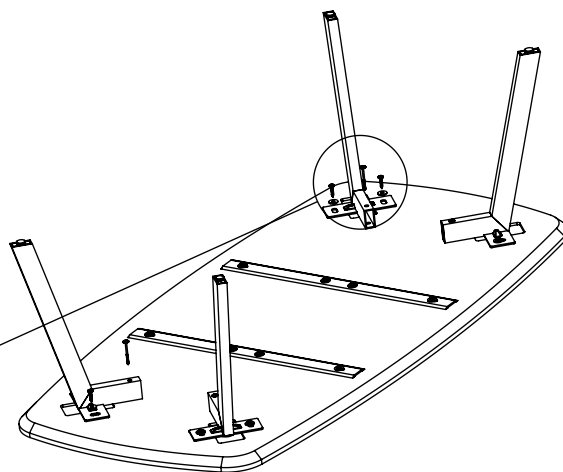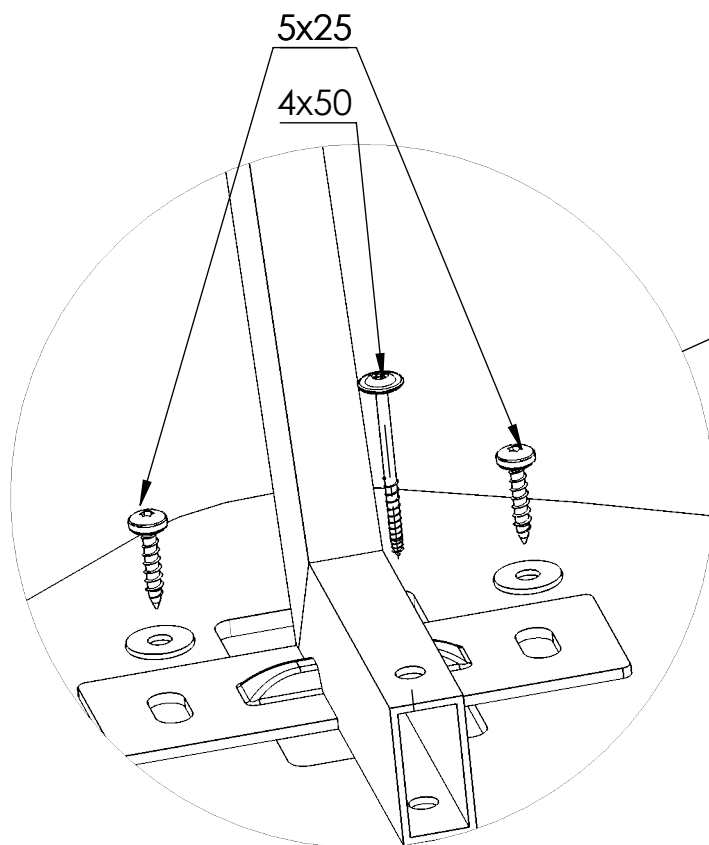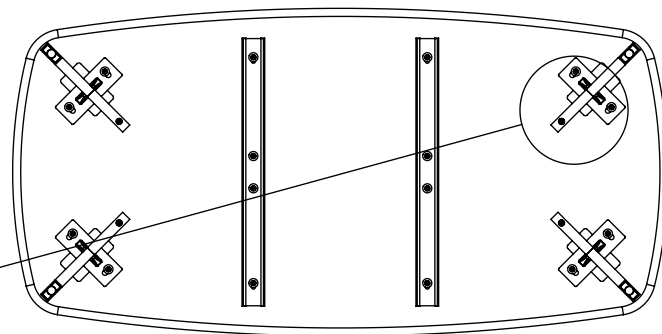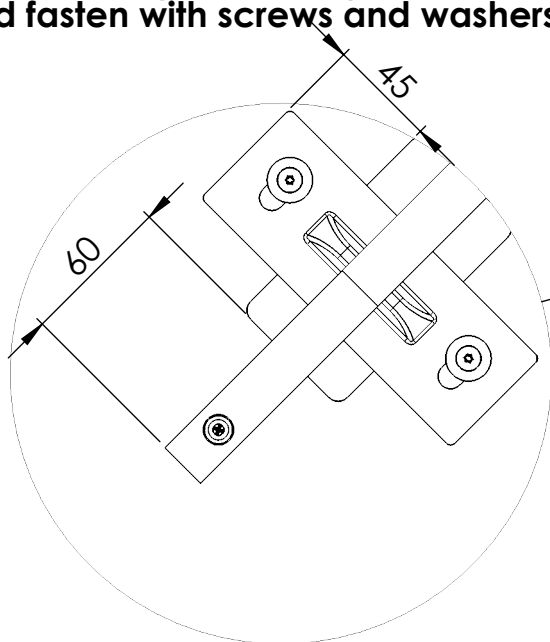


 
Step 2

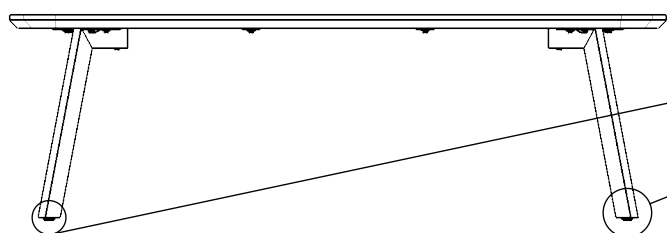



After assembly, adjust the leg

Example of installing legs BST70

  
Step 1

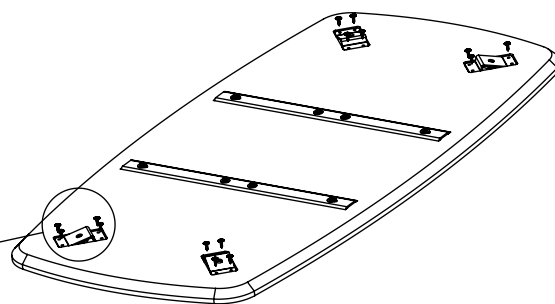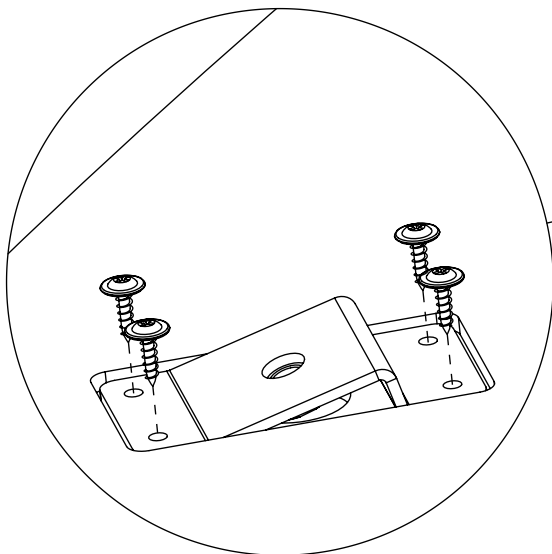

  Step 2

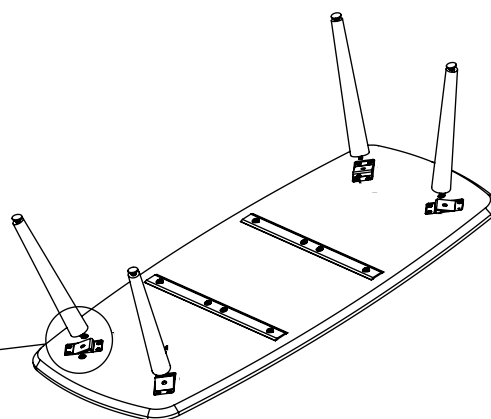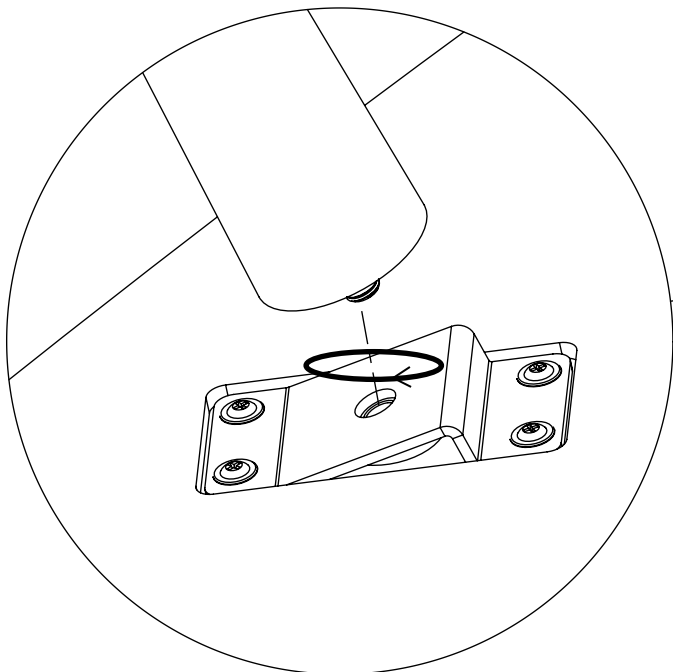

 Step 3

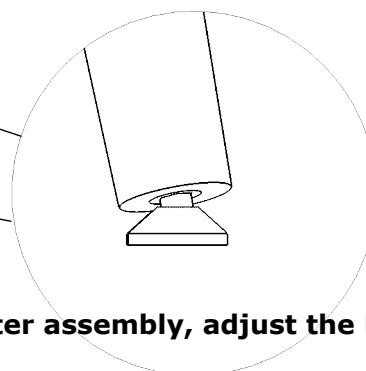

After assembly, adjust the leg