
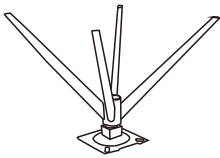

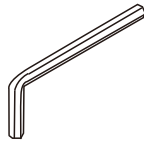
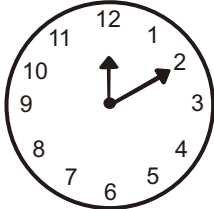


LASANTO MONTAGE INSTRUCTIES

A	X1	B	X1	C	X4	D	X4	E	X1	
							M6X20mm			

STAP1

Tighten the screws 100%

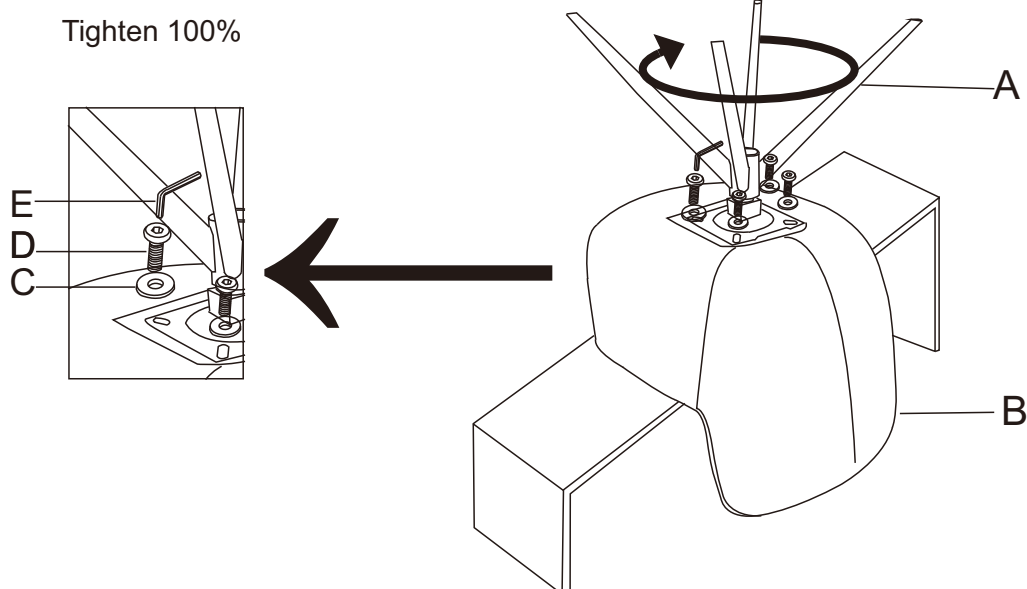

STAP2

