
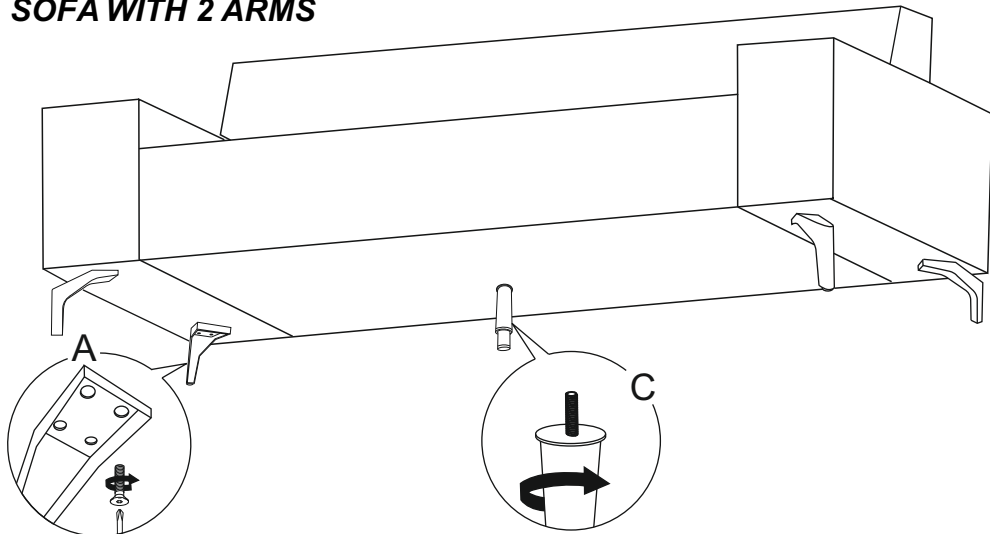
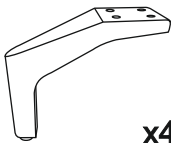
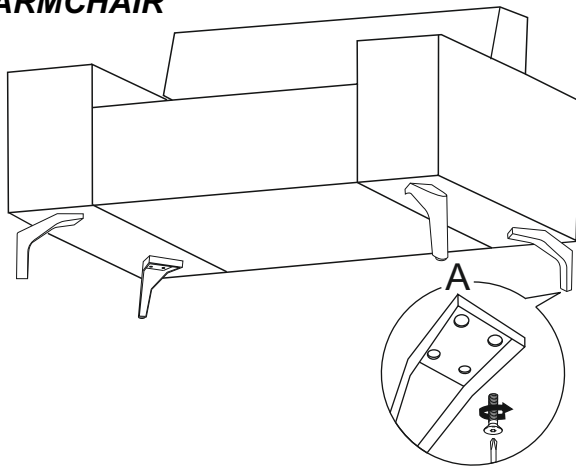
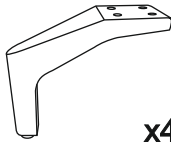
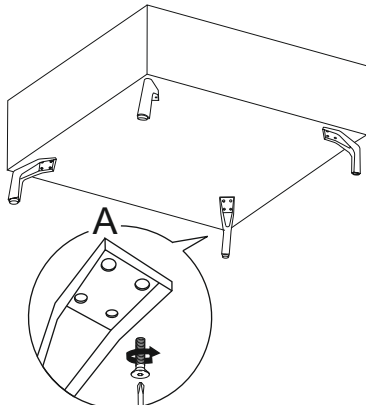
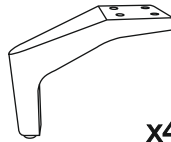
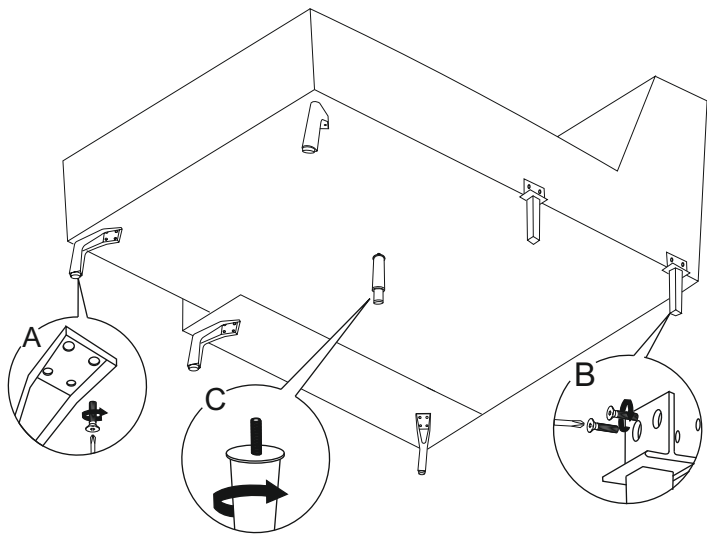
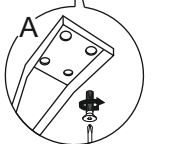
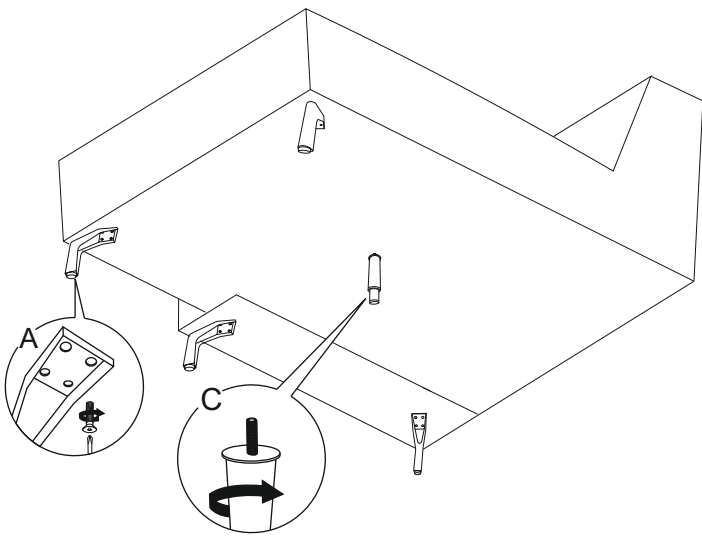
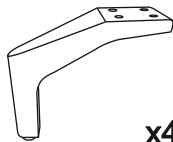
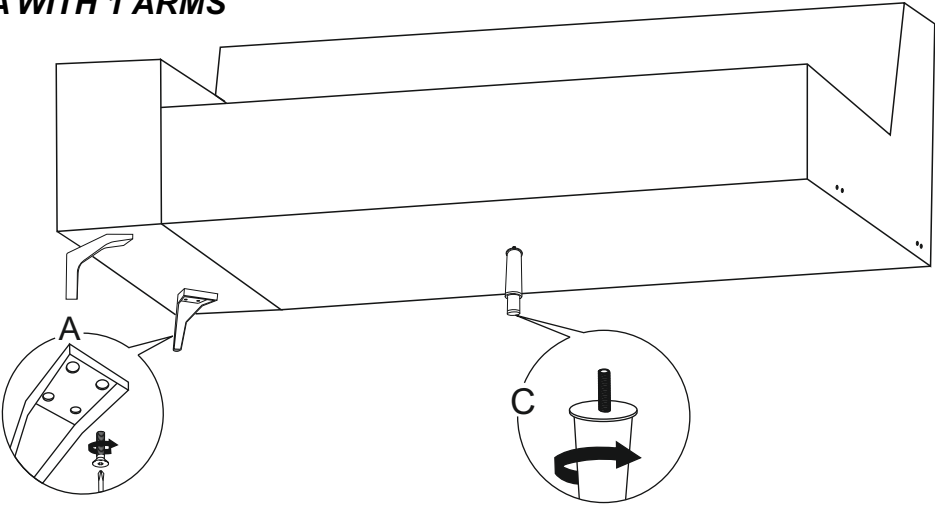



Article: ALEJA		Assembly Instruction									
SOFA WITH 2 ARMS 						A Frankfurt  x4		M6x25mm  x16			
						C Coliseo  x1					
ARMCHAIR 						A Frankfurt  x4		PUFF 90x90 		A Frankfurt  x4	
						M6x25mm  x16				M6x25mm  x16	
LONG CHAIR "B" 						A Frankfurt  x4		C coliseo  x1		M6x25mm  x20	
LONG CHAIR "A" 						A Frankfurt  x4		C coliseo  x1		M6x25mm  x16	


SOFA WITH 1 ARMS

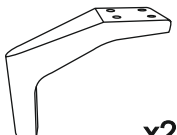


A	Frankfurt	M6x25mm
	x2	 x8
C	Coliseo	
	x1	


BETWEEN ELEMENT

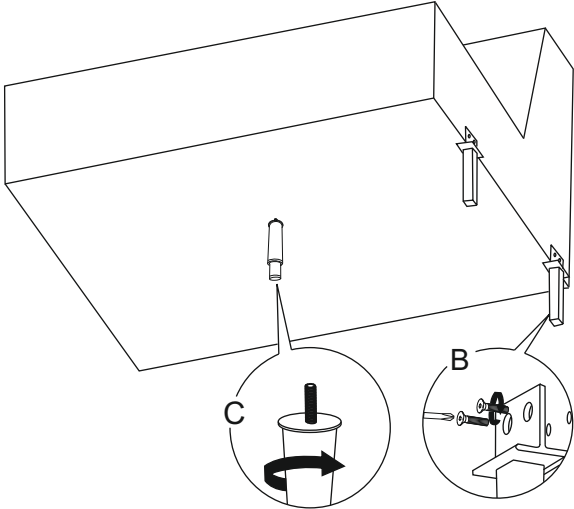


C	coliseo	B	#1
	x1		x2
		M6x25mm	
			x4


CORNER

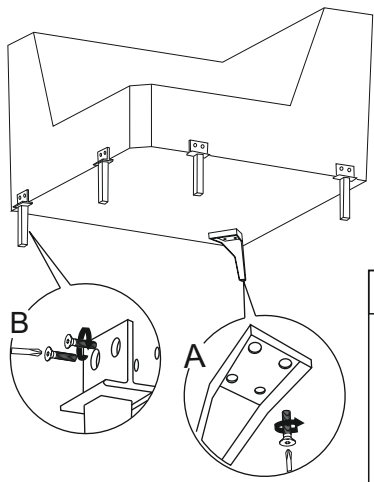


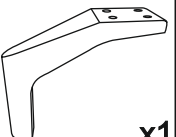
B	#1	A	Frankfurt
	x4		x1
	M6x25mm		
			x12

OTTOMAN RIGHT

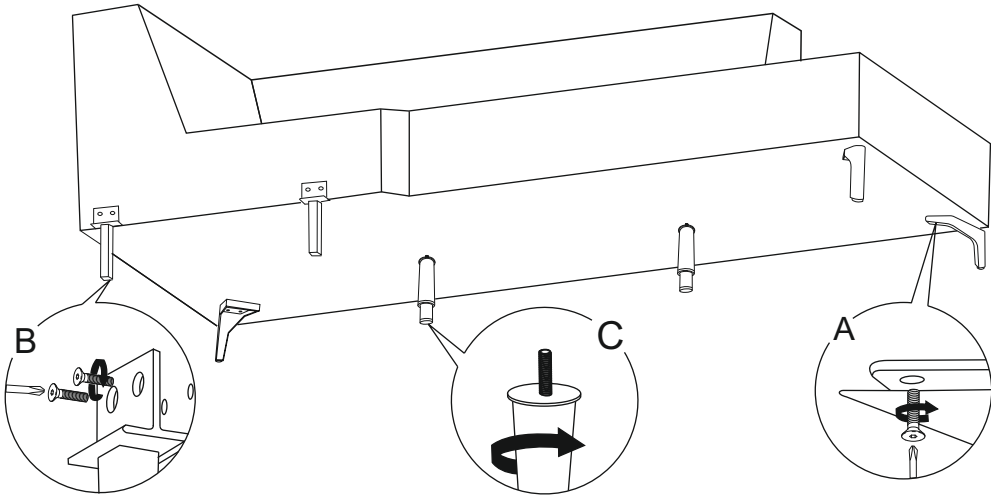

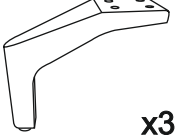A	Frankfurt	B	#1
	x3		x2
C	coliseo	M6x25mm	
	x2		x16

Connect the two parts of the sofa

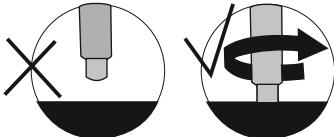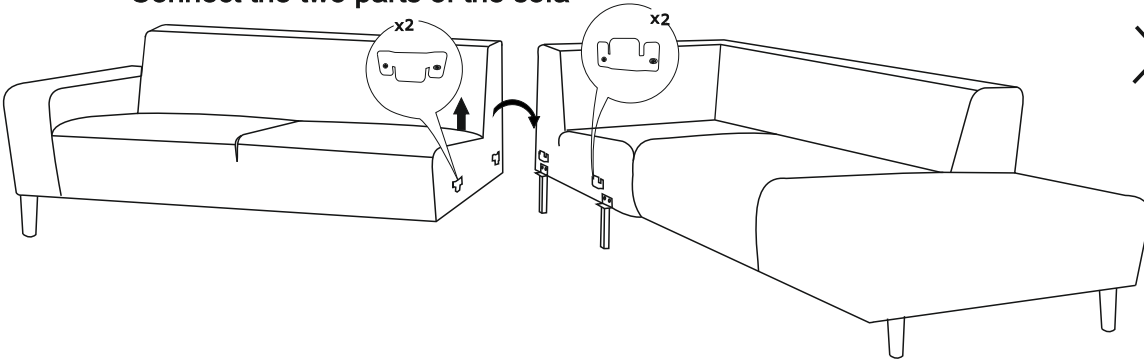

Please insert the adjustable leg!