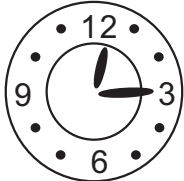






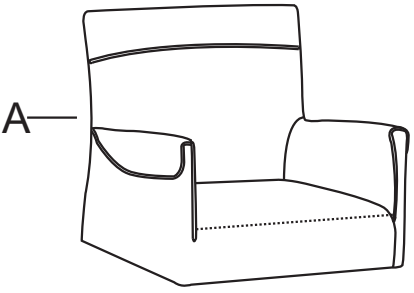
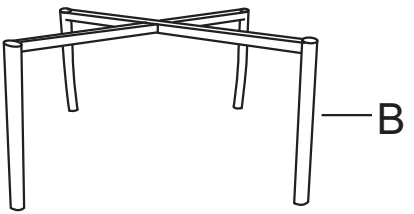
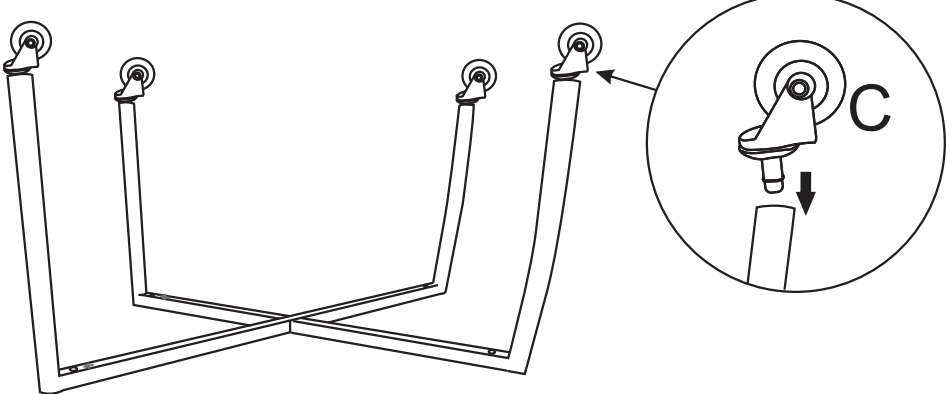


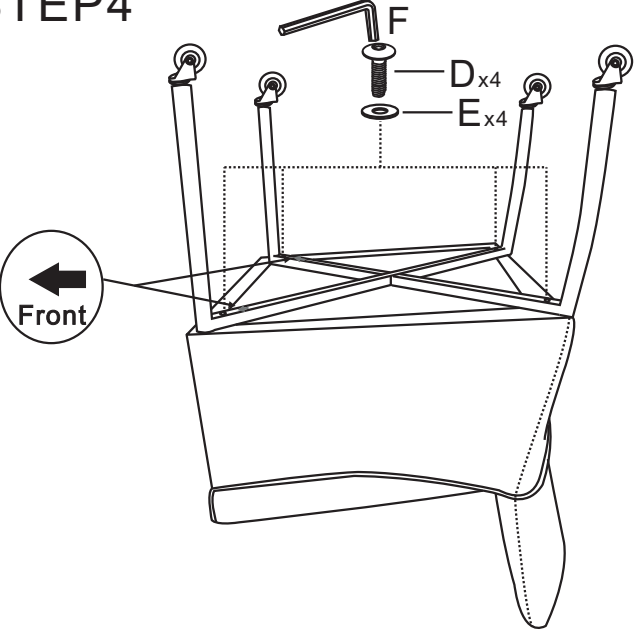
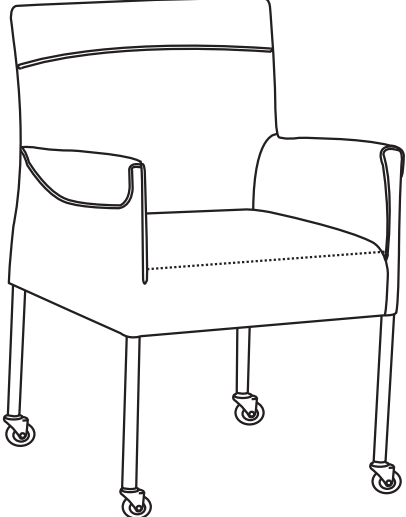
# Barola montagehandleiding

Pronto  
wonen

	Ax1 	Bx1 	Cx4 	Dx4  M6x35mm	Ex4  M6xφ16x1.2mm	Fx1  M6
---	--	--	--	--	--	--

<b>STEP1</b> 	<b>STEP2</b> 
---	--

**STEP3**  


<b>STEP4</b> 	<b>STEP5</b> 
---	---