




ASSEMBLY INSTRUCTION

A  M6x16mm x2	B  M6x30mm x2	C  M6 x12	D  x1	E  T=6mm x2		
①  x1	②  x1	③  x1	④  x1	⑤  x1		


STEP 1

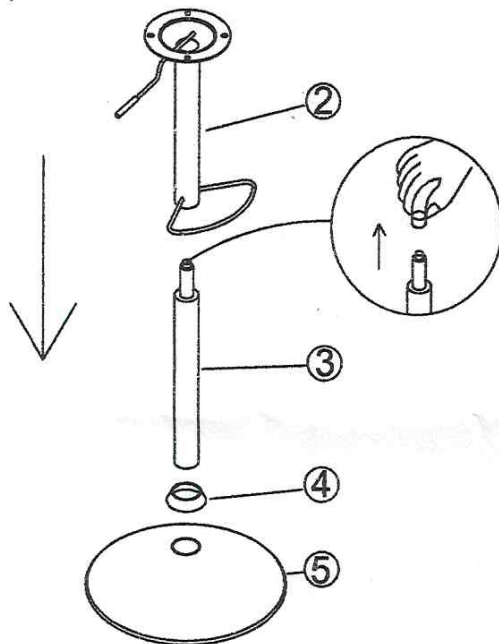

STEP 2

NOTE


- 1) After assembled the barstool, if you felt the angles of back is forward. Please kindly release the screws of round supported plate under the seat.
- 2) Add a washer (E) and the metal washer (C) on the front of the holes (as the drawing of step 2)

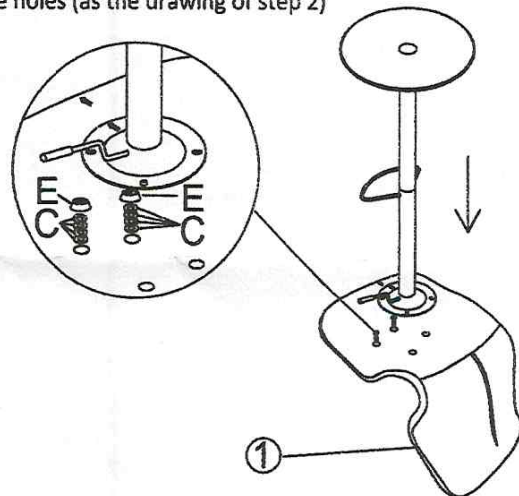

STEP 3

NOTE

Assemble the round supported plate by M6x25mm screws(B) + a washer (C) in front of holes and M6x16mm(A)+a washer (C) in back hole.

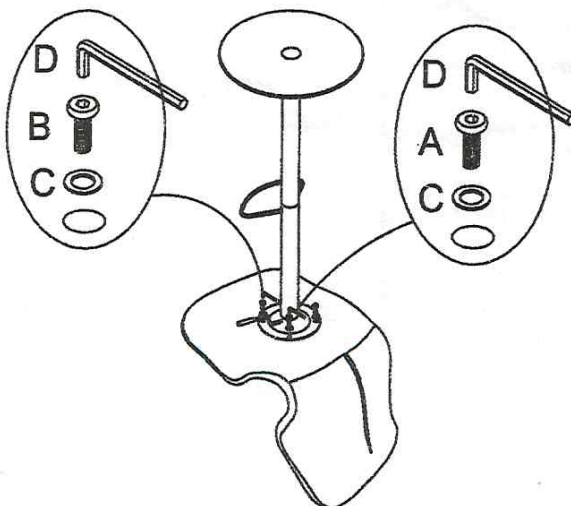

STEP 4

NOTE

- ① "Before you tight all screws. Please make sure all the screws in the right holes/positions."
- ② "If negative, please release the screws to adjust it to right position and tight them."

