
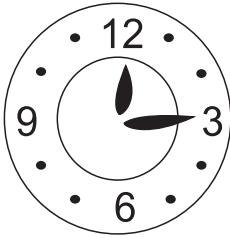
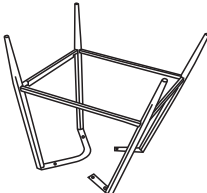
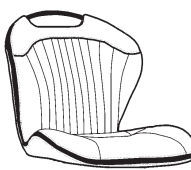



Montagehandleiding barkruk Tubac

	A x1 	B x1 	C x 6  6*18*1.5mm	D x 6  M6*20	E x1  M5
---	--	--	---	--	--

STEP1

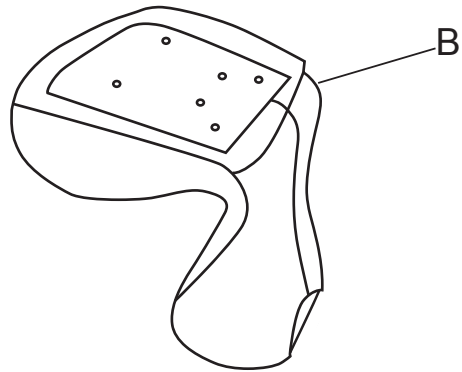


STEP2

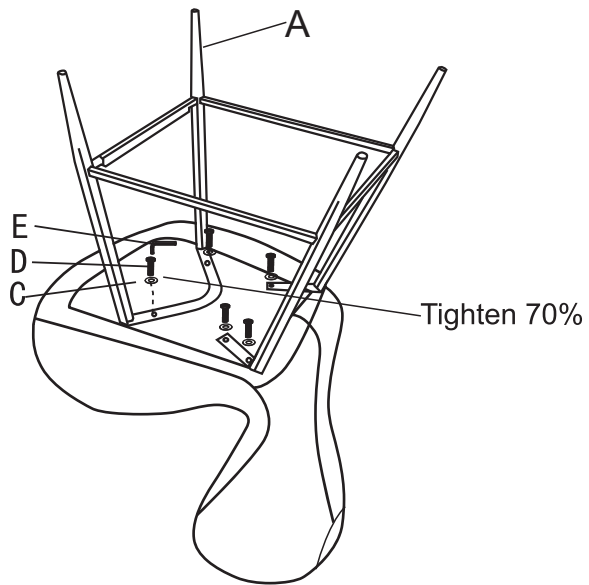

STEP3

Place the chair on a flat surface
 Make sure the chair is stable
 Tighten the screw to 100%

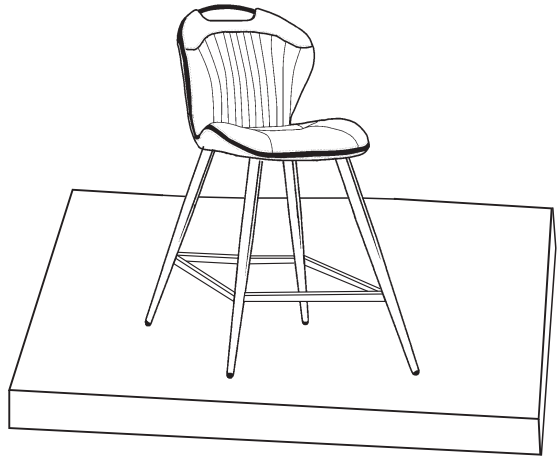

STEP4

