


ASSEMBLY INSTRUCTION

A  M6x16mm x2	B  M6x20mm x2	C  M6 x12	D  x1			
①  x1	②  x1	③  x1	④  x1	⑤  x1		

STEP 1

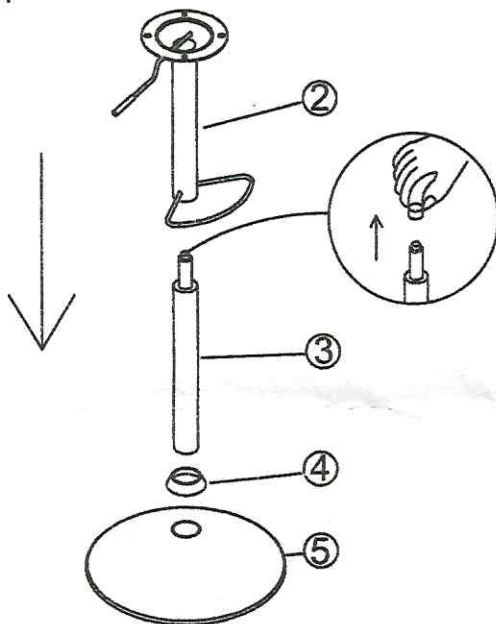


STEP 2

NOTE

1) After assembled the barstool, if you felt the angles of back is forward. Please kindly release the screws of round supported plate under the seat.


2) Add a washer (or 2pcs or 3pcs) on the front of the holes (as the drawing of step 2)

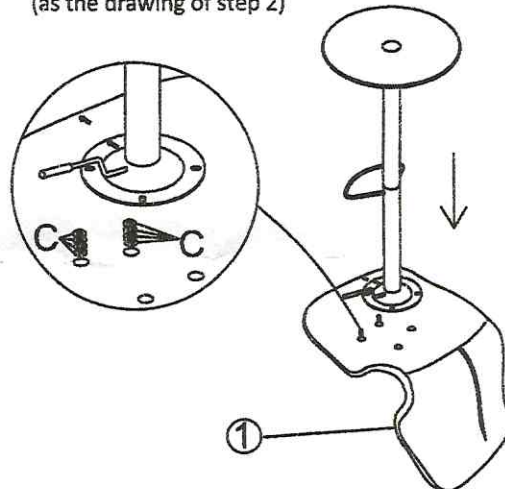

STEP 3

NOTE

Assemble the round supported plate by M6x20mm screws(B) + a washer (c) in front of holes and M6x16mm(A)+a washer (c) in back hole.

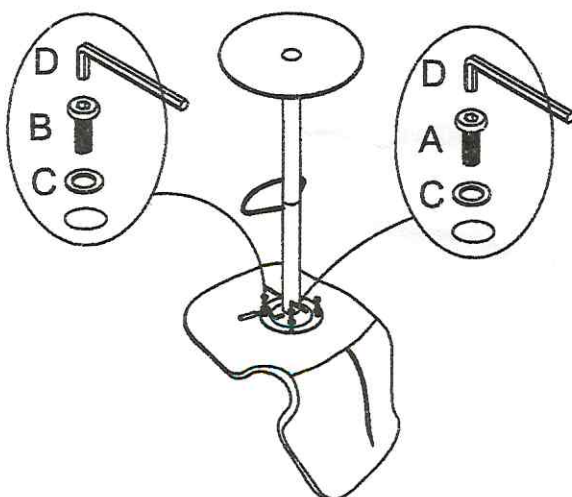

STEP 4

NOTE

① "Before you tight all screws. Please make sure all the screws in the right holes/positions."

② "If negative, please release the screws to adjust it to right position and tight them."

