
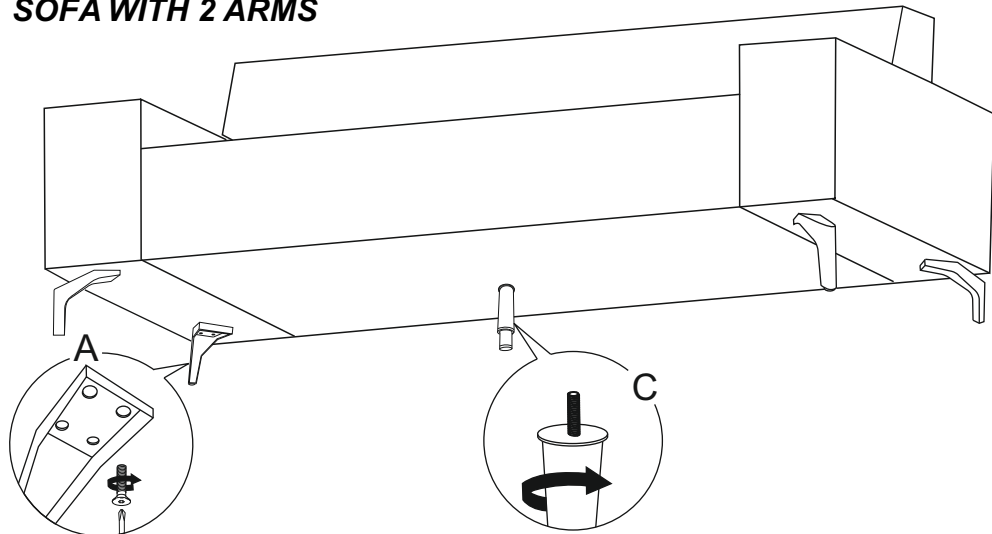
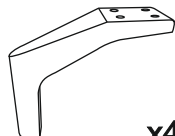
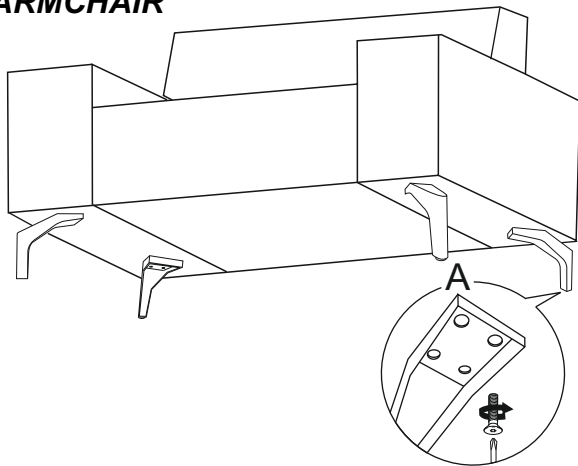
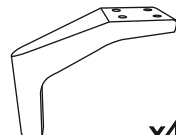
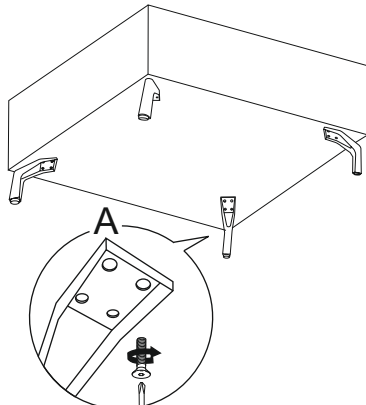
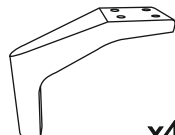
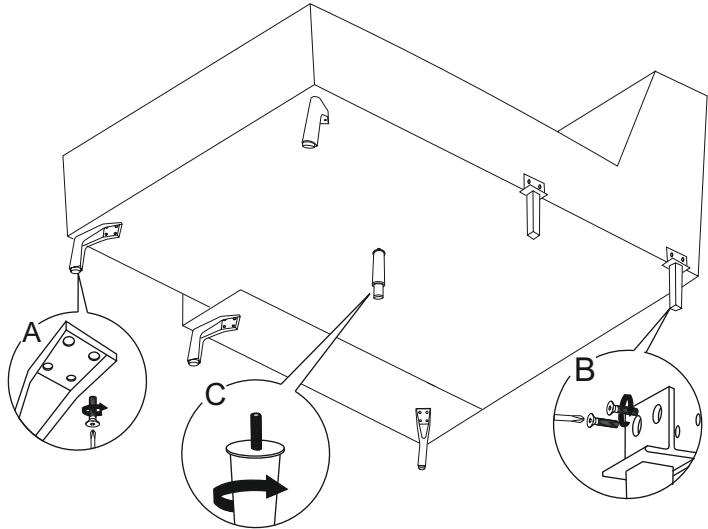
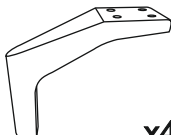

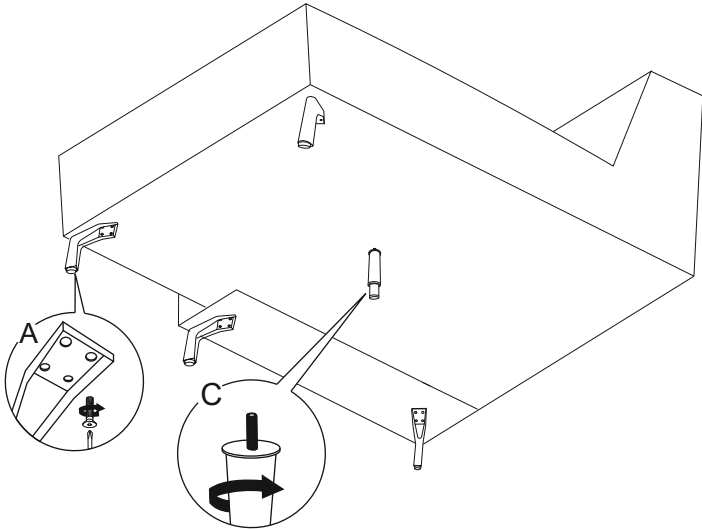
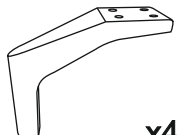
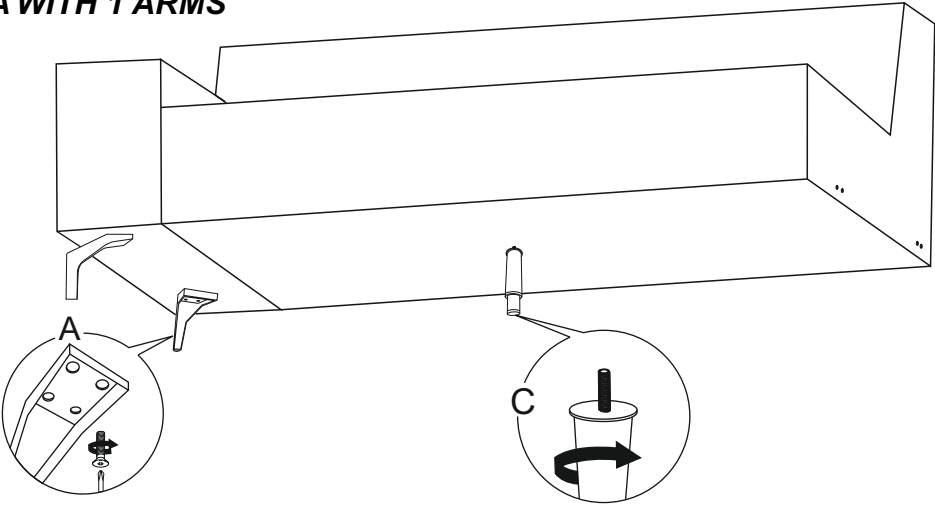



Article: TREMONT		Assembly Instruction											
SOFA WITH 2 ARMS 						A Frankfurt		M6x25mm					
						 x4		 x16					
ARMCHAIR 						A Frankfurt							
						 x4		 x16					
PUFF 90x90 						A Frankfurt							
						 x4		 x16					
LONG CHAIR "B" 						A Frankfurt		B #1		C coliseo		M6x25mm	
						 x4		 x2		 x1		 x20	
LONG CHAIR "A" 						A Frankfurt		C coliseo		M6x25mm			
						 x4		 x1		 x16			


SOFA WITH 1 ARMS

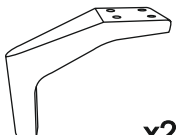


A	Frankfurt	M6x25mm
	x2	 x8
C	Coliseo	
	x1	


BETWEEN ELEMENT

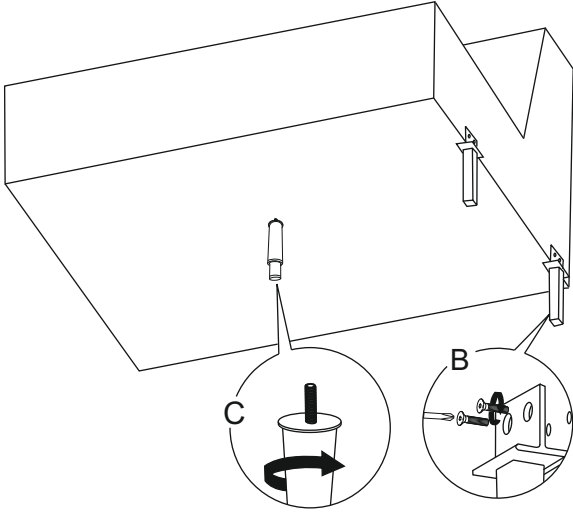


C	coliseo	B	#1
	x1		x2
		M6x25mm	
			x4


CORNER

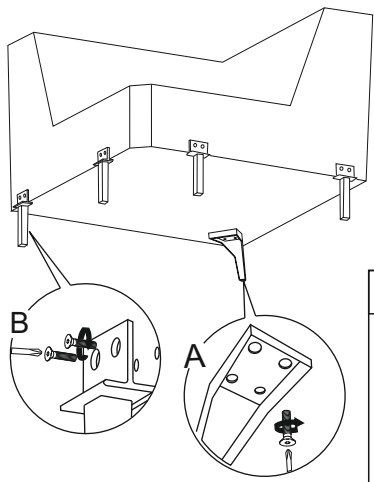


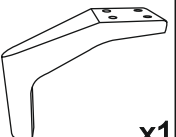
B	#1	A	Frankfurt
	x4		x1
	M6x25mm		
			x12

OTTOMAN RIGHT

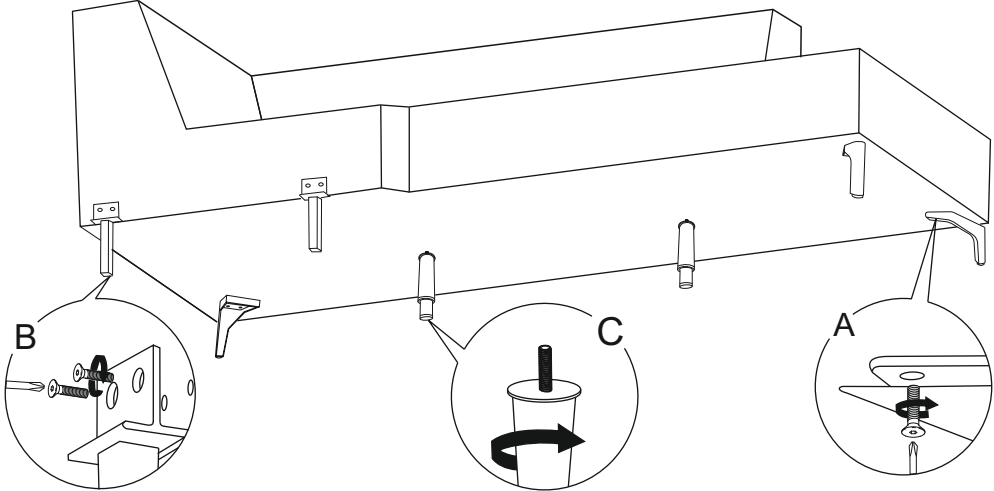

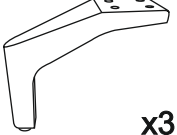A	Frankfurt	B	#1
	x3		x2
C	coliseo	M6x25mm	
	x2		x16

Connect the two parts of the sofa

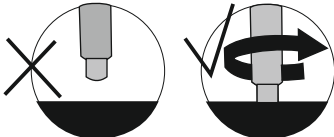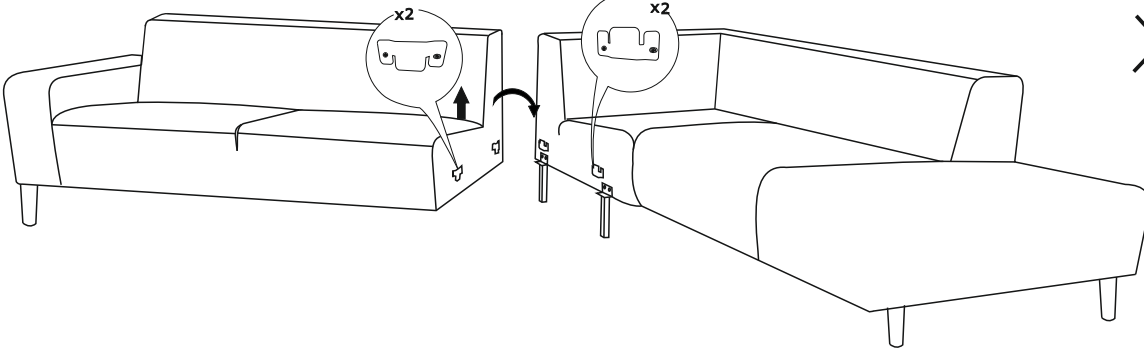

Please insert the adjustable leg!